# vatech A9

# **Installation manual**

Model : PHT-30CSS Version : 1.05

• English





## **Notice**

This manual covers the installation procedures for the **vatech A9 (Model: PHT-30CSS) digital X-ray imaging system**. The Installation Manual and the User Manual are shipped with each hardware unit.

#### Brand name: vatech A9 (Model: PHT-30CSS)

#### Manufactured by: VATECH Co., Ltd.

In this manual, "equipment" refers to vatech A9.

In abbreviated forms, CBCT, CEPH, and PANO denote Cone Beam Computed Tomography, Cephalo, and Panorama, respectively. They are interchangeably used.

The "Optional" in this manual means that the function or features are left to the customer's or user's choice.

Review this manual thoroughly to ensure the proper installation. The **vatech A9** is in steady improvement. The information contained in this manual may be subject to change without notice, justification, or notification of the persons concerned.

**VATECH Co., Ltd.** (manufacturer) reserves intellectual property rights (IPR) for this manual and the equipment described herein. Reproduction of this manual partially or fully is prohibited without the manufacturer's consent.

Windows 10, NVIDIA, etc., are 3<sup>rd</sup> parties' prominent or registered trademarks protected by related laws, and these trademarks are used in this manual just only for explanation.

For further information not covered in this manual or the accompanying documentation, please contact us:

Telephone: (+82) 1588-9510

E-mail: gcs@vatech.com

Website: www.vatech.com

Address: 13, Samsung 1-ro 2-gil, Hwaseong-si, Gyeonggi-do, Korea

#### Manual Name: vatech A9 (Model: PHT-30CSS) Installation Manual

Version: 1.05

Publication Date: 2022-09

# **Page Intentionally Left Blank**

# **Important Notes**

	The sudden temperature changes inside the X-ray room may cause condensation. Ensure to keep the inside temperature constant for at least an hour before turning on the equipment.
Ensure to install the equipment on flat ground. If the equipment is no installed parallel to the ground, it may fall or tilt, causing physical inju property damage, or system malfunction.	
<b>ACAUTION</b>	DO NOT push or pull the equipment.
Only VATECH-authorized technicians shall install the equipm complying with the proper procedures and regulations stated manual.	
	Failure to read and understand this manual's information may cause a physical injury, property damage, or equipment failure. Please read each chapter thoroughly before attempting any of the installation procedures.

## **Table of Contents**

Notice		i
Important No	otes	iii
Table of Cont	ents	v
1.	Introd	luction 1
	1.1	Manufacturer's Liability1
	1.2	Customer's Responsibility1
	1.3	Conventions in this Manual2
	1.4	Marks and Symbols7
2.	Choos	ing an Installation Site 9
	2.1	Room Requirements9
	2.2	Specifications for Electrical Installation13
	2.3	Electrical Requirement13
	2.4	Exposure Switch Installation Options14
	2.5	Installation Versions16
	2.6	Installing the Warning Lamp and Door Interlock Switch
	2.7	Installing the Emergency Stop Switch20
3.	Before	Installing the System 21
	3.1	Required Tools21
	3.2	Checking the ShockWatch and TiltWatch23
	3.3	Unpacking Boxes24
	3.4	Checking the Parts
4.	Instal	ling the Equipment: Base Stand (Optional) 37
	4.1	Assembling the Base and the Main Unit37
	4.2	Installing the CEPH Unit (Optional)42
	4.3	Installing the Wall and Column Brackets46
	4.4	Fixing the Base (Optional)52
	4.5	Connecting the Cables to the Equipment56
	4.6	Removing the Transportation Safety Bolts58

	4.7	Leveling the Equipment	50
	4.8	Tightening the Bolts	53
5.	Install	ing the Equipment: Wall Mount 6	64
	5.1	Installing the Equipment	54
	5.2	Installing the CEPH Unit (Optional)	59
	5.3	Installing the Wall and Column Brackets	59
	5.4	Connecting the Cables to the Equipment	59
	5.5	Removing the Transportation Safety Bolts	59
	5.6	Leveling the Equipment	70
	5.7	Tightening the Bolts	73
6.	Compl	eting Miscellaneous Works 7	'4
	6.1	Assembling Various Covers	74
	6.2	Assembling the Chinrest and Bite	76
	6.3	Installing the Switch Holders	77
	6.4	Installing the real miscellaneous works	79
7.	Setting	g up PC 8	82
7.	Setting	g up PC 8 Direct Connection Diagram	
7.			82
7.	7.1	Direct Connection Diagram	82 83
7.	7.1 7.2	Direct Connection Diagram	82 83 88
<u>7.</u> <u>8.</u>	7.1 7.2 7.3 7.4	Direct Connection Diagram	82 83 88
	7.1 7.2 7.3 7.4	Direct Connection Diagram	82 83 88 90
	7.1 7.2 7.3 7.4 Setting	Direct Connection Diagram	82 83 88 90 96
	7.1 7.2 7.3 7.4 Setting 8.1	Direct Connection Diagram	82 83 88 90 96 96 97
	7.1 7.2 7.3 7.4 Setting 8.1 8.2	Direct Connection Diagram	32 33 38 90 96 96 97 98
	7.1 7.2 7.3 7.4 Setting 8.1 8.2 8.3	Direct Connection Diagram       8         The Recommended PC Requirements       8         Connecting the Cables to PC       8         Setting up the G-Ethernet Grabber       9         g up PC's Environment Variables       9         Before Beginning       9         Turning off the Firewall       9         Setting up the Power Management Options       9	82 83 88 90 96 96 97 98 98
	7.1 7.2 7.3 7.4 Setting 8.1 8.2 8.3 8.4 8.5	Direct Connection Diagram       8         The Recommended PC Requirements       8         Connecting the Cables to PC       8         Setting up the G-Ethernet Grabber       9         g up PC's Environment Variables       9         Before Beginning       9         Turning off the Firewall       9         Setting up the Power Management Options       9         Turning off the User Account Control       10	32 33 38 90 96 96 97 98 90 90
8.	7.1 7.2 7.3 7.4 Setting 8.1 8.2 8.3 8.4 8.5	Direct Connection Diagram       8         The Recommended PC Requirements       8         Connecting the Cables to PC       8         Setting up the G-Ethernet Grabber       9         g up PC's Environment Variables       9         Before Beginning       9         Turning off the Firewall       9         Setting up the Power Management Options       9         Turning off the User Account Control       10         Setting Folder Exclusions with Anti-virus Software       10	32 33 38 90 96 96 97 98 90 90 91 92
8.	7.1 7.2 7.3 7.4 Setting 8.1 8.2 8.3 8.4 8.5 Install	Direct Connection Diagram       8         The Recommended PC Requirements       8         Connecting the Cables to PC       8         Setting up the G-Ethernet Grabber       9         g up PC's Environment Variables       9         Before Beginning       9         Setting up the Firewall       9         Setting up the Power Management Options       9         Setting off the User Account Control       10         Setting Folder Exclusions with Anti-virus Software       10         ing Software       10	32 33 38 90 96 96 97 98 90 97 98 90 01 92

#### Table of Contents

	9.4	Installing the InstallShield104
	9.5	Setting up the User-specific Information113
10.	Techn	ical Specifications 128
	10.1	Mechanical Specifications128
	10.2	Drawing Dimensions129
	10.3	Electrical Specifications131
	10.4	Environmental Specifications132
Appendix		1
	Α.	Installing the Warning Lamp and Door Interlock Switch1
	В.	Installing the Emergency Stop Switch4
	C.	Connecting the 3 <sup>rd</sup> party Exposure Switch (Optional)5
	D.	Checking PC BIOS Settings6
	Ε.	Installation Checklist7

## 1. Introduction

#### 1.1 Manufacturer's Liability

As the manufacturer, VATECH assumes liability for the safe and reliable installation and operation of this equipment only when:

- Equipment installation, including software installation, was conducted by an authorized agent by this installation manual.
- The electrical installation was conducted to the appropriate requirements specified in IEC-60363.
- Genuine original or approved replacement parts are used.
- Maintenance/repair service has been performed by a qualified technician(s) from one of our authorized agents.
- The equipment has been used under normal conditions by the user's manual.
- PC Software has been properly used by the manufacturer's installation instructions and user manuals.

#### 1.2 Customer's Responsibility

Site planning and preparation are the responsibility of the customer. The following points should be considered fundamentally important to all customers of this product:


- Install all required materials before the delivery of the system.
- Complete the floor, ceiling, and walls of the room before installing the equipment.
- Install proper-sized junction boxes, with covers, at the necessary locations.
- Install a mains power with the proper voltage output and an adequate kVA rating.
- Install the circuit breaker specified by this manual.
- Provide the installer(s) with the room's current dimensions, including the hallway and entry door sizes.
- The customer must have an electrician install more than two power outlets in the room.


#### 1.3 Conventions in this Manual

The following symbols are used in this manual to emphasize information or potential risks to the equipment or user. Ensure that you fully understand each symbol and follow the accompanying instructions.

Please observe all warnings and safety information included in this document to prevent physical injury and damage to the equipment.

	WARNING	<ul> <li>Indicates that a specific hazard is known to exist which, through inappropriate conditions or actions, may cause:</li> <li>Severe personal injury (to the operator and patient)</li> <li>Substantial property damage.</li> </ul>	
<b>CAUTION</b>	CAUTION	<ul> <li>Indicates that a potential hazard may exist that through inappropriate conditions or actions will or can cause:</li> <li>Minor injury</li> <li>Property damage.</li> </ul>	
IMPORTANT	IMPORTANT         Indicates that a potential problem may exist that inappropriate conditions or actions can cause:           •         Property damage.		
NOTICE	NOTE	<ul> <li>Indicates precautions or recommendations that should be used in the operation of the system, specifically:</li> <li>Using this Manual</li> <li>Notes to emphasize or clarify a point.</li> </ul>	
	RADIATION	RADIATION Indicates a possible danger from radiation exposure.	
	ESD susceptibility	Indicates that an item is susceptible to damage from electrostatic discharges.	

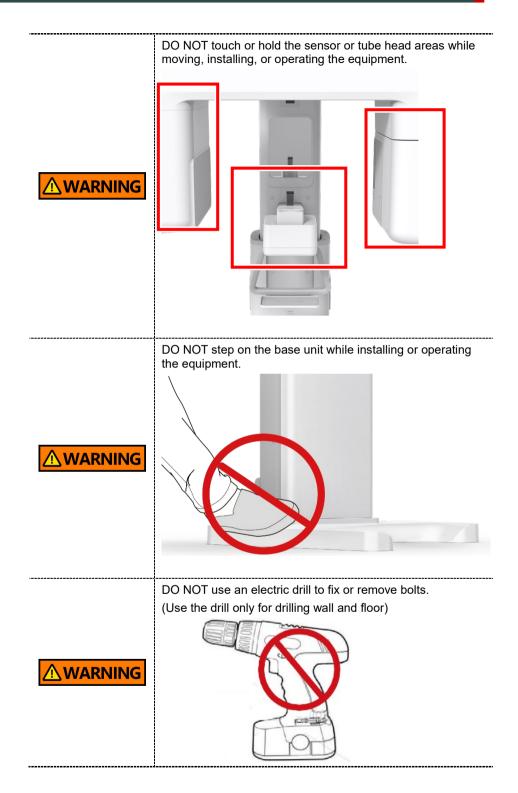

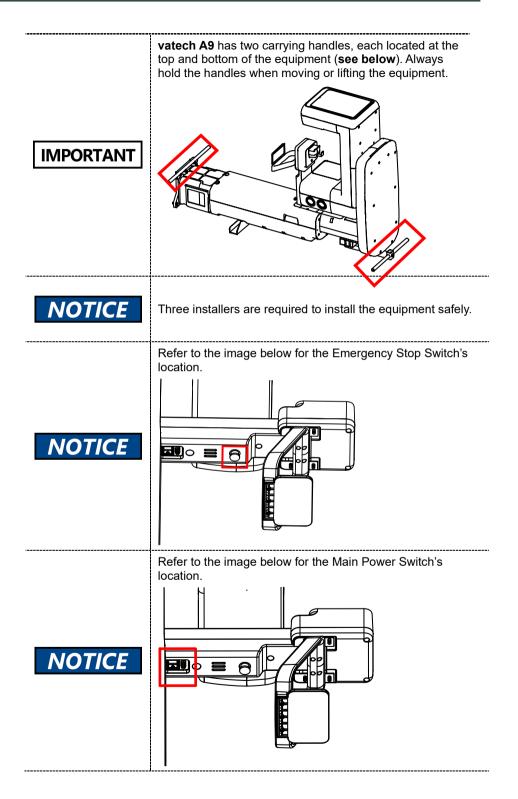

Warnings Regarding X-ray Radiation			
<ul> <li>Failure to install this equipment in an approved location</li> </ul>			
may be dangerous to the patient and operator.			
<ul> <li>Stationary radiation shielding must be installed to</li> </ul>			
protect the operator from radiation.			
<ul> <li>The X-ray system may cause injury to the patient if</li> </ul>			
improperly used. Obey all federal and municipal			
standards regarding radiation safety.			
<ul> <li>When exposing the patient to the X-ray, the operator</li> </ul>			
must be behind a protective wall or take other			
protective actions. The operator should remain at least			
2 m (7 feet) away from the X-ray when pressing the			
Exposure Switch and observe the patient, and capture			
progression.			
<ul> <li>Operators must provide the patient with protective</li> </ul>			
clothing before X-ray imaging. Pregnant women must			
consult with a doctor before being exposed to an X-ray.			
 <ul> <li>Make sure to read and fully understand the installation</li> </ul>			
instructions before installation. The installer must			
confirm that the system is installed according to the			
instructions provided by this manual and perform the			
appropriate procedures therein.			
<ul> <li>If the equipment has been stored at temperatures</li> </ul>			
below 10℃(50°F) for more than a couple of hours, allow			
the equipment to reach room temperature before			
applying the mains voltage.			
<ul> <li>Installation and related work must only be performed by</li> </ul>			
people authorized by VATECH.			
<ul> <li>DO NOT connect any items or equipment to this system</li> <li>that are not not of the system ISOCOCOL 1.1.4 (2rd)</li> </ul>			
that are not part of the system: IEC60601-1-1 (3rd			
edition: 2005).			
 <ul> <li>Any equipment not approved by VATECH must comply with the applicable standards: IEC 60950-1 (2nd</li> </ul>			
edition: 2005) for IT equipment (Ex: PC) and IEC			
60601-1 (3rd edition: 2005) for medical electrical			
equipment.			
<ul> <li>All operators of this equipment are responsible for</li> </ul>			
ensuring that the requirements outlined in IEC 60601-1-			
1 (3rd edition: 2005): Safety Requirements for Medical			
Electrical Equipment are fully met to ensure the safety			
of patients, operators, and the environment.			
<ul> <li>DO NOT touch-sensitive areas such as sensors during</li> </ul>			
installation. These areas are indicated at the			
appropriate stages during the installation procedures.			
<ul> <li>The use of wireless phones may interfere with the</li> </ul>			
operation of this equipment.			
<ul> <li>Use an ESD (electrostatic sensitive device) wristband</li> </ul>			
during installation and connect it to a ground wire.			
<ul> <li>Touch a ground point to discharge static electricity</li> </ul>			
before handling PCB boards.			

English


	Installation Site			
	Installation Site			
	<ul> <li>The PC Monitor, Emergency Stop Switch, and X-ray Exposure Switch should be installed near the operator so that he or she can manage them simultaneously in</li> </ul>			
	an emergency.			
	<ul> <li>Proper shielding of the room is essential. The installers are responsible for verifying that all applicable radiation safety requirements are met since they vary depending on the country. It is the installer's responsibility to verify</li> </ul>			
	that all applicable radiation safety requirements are met.			
IMPORTANT	<ul> <li>DO NOT install the equipment near other devices.</li> </ul>			
	<ul> <li>DO NOT install the equipment in an area that is</li> </ul>			
	exposed to strong electromagnetic fields.			
	<ul> <li>DO NOT install the equipment in an area where there is the risk of an explosion.</li> </ul>			
	<ul> <li>This system's electrical installation shall comply with all local code requirements for electro-medical systems: IEC 60364-7-710:2002.</li> </ul>			
	<ul> <li>It is strongly recommended that a UPS be installed at the same time as the equipment.</li> </ul>			
	<ul> <li>The equipment, PC, and all peripheral devices must be well-grounded.</li> </ul>			
	This equipment complies with the following			
	standards:			
	IEC60601-1-1:2005 Standard Safety Requirements for			
	Medical Electrical Equipment			
	IEC 60601-1-2:2005 Electromagnetic Interference			
	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection			
	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical			
	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical Equipment			
	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical Equipment IEC 60950-1: 2nd edition:2005 Standards for Information Technology Equipment			
	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical Equipment IEC 60950-1: 2nd edition:2005 Standards for Information Technology Equipment IEC60601-2-7 and IEC60601-2-28: X-ray Tube Heads			
IMPORTANT	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical Equipment IEC 60950-1: 2nd edition:2005 Standards for Information Technology Equipment IEC60601-2-7 and IEC60601-2-28: X-ray Tube Heads IEC60364-7-710: 2002 Local Code Requirements for			
IMPORTANT	IEC 60601-1-2:2005 Electromagnetic Interference IEC 60601-1-3:2005 Radiation Protection IEC 60601-1:2005 Standards for Medical Electrical Equipment IEC 60950-1: 2nd edition:2005 Standards for Information Technology Equipment IEC60601-2-7 and IEC60601-2-28: X-ray Tube Heads IEC60364-7-710: 2002 Local Code Requirements for Electro-Medical System Installation			
IMPORTANT	<ul> <li>IEC 60601-1-2:2005 Electromagnetic Interference</li> <li>IEC 60601-1-3:2005 Radiation Protection</li> <li>IEC 60601-1:2005 Standards for Medical Electrical</li> <li>Equipment</li> <li>IEC 60950-1: 2nd edition:2005 Standards for Information</li> <li>Technology Equipment</li> <li>IEC 60601-2-7 and IEC 60601-2-28: X-ray Tube Heads</li> <li>IEC 60364-7-710: 2002 Local Code Requirements for</li> <li>Electro-Medical System Installation</li> <li>IEC 60601-1-1:2005 regulation shall be met to their full extent for the safety of the patients, operators, and the</li> </ul>			
IMPORTANT	<ul> <li>IEC 60601-1-2:2005 Electromagnetic Interference</li> <li>IEC 60601-1-3:2005 Radiation Protection</li> <li>IEC 60601-1:2005 Standards for Medical Electrical</li> <li>Equipment</li> <li>IEC 60950-1: 2nd edition:2005 Standards for Information</li> <li>Technology Equipment</li> <li>IEC60601-2-7 and IEC60601-2-28: X-ray Tube Heads</li> <li>IEC60364-7-710: 2002 Local Code Requirements for</li> <li>Electro-Medical System Installation</li> <li>IEC 60601-1-1:2005 regulation shall be met to their full</li> </ul>			
IMPORTANT	<ul> <li>IEC 60601-1-2:2005 Electromagnetic Interference</li> <li>IEC 60601-1-3:2005 Radiation Protection</li> <li>IEC 60601-1:2005 Standards for Medical Electrical</li> <li>Equipment</li> <li>IEC 60950-1: 2nd edition:2005 Standards for Information</li> <li>Technology Equipment</li> <li>IEC 60601-2-7 and IEC 60601-2-28: X-ray Tube Heads</li> <li>IEC 60364-7-710: 2002 Local Code Requirements for</li> <li>Electro-Medical System Installation</li> <li>IEC 60601-1-1:2005 regulation shall be met to their full extent for the safety of the patients, operators, and the environment—when any person assembles or modify a medical electrical system by combing it with other</li> </ul>			
IMPORTANT	<ul> <li>IEC 60601-1-2:2005 Electromagnetic Interference</li> <li>IEC 60601-1-3:2005 Radiation Protection</li> <li>IEC 60601-1:2005 Standards for Medical Electrical</li> <li>Equipment</li> <li>IEC 60950-1: 2nd edition:2005 Standards for Information</li> <li>Technology Equipment</li> <li>IEC 60601-2-7 and IEC 60601-2-28: X-ray Tube Heads</li> <li>IEC 60364-7-710: 2002 Local Code Requirements for</li> <li>Electro-Medical System Installation</li> <li>IEC 60601-1-1:2005 regulation shall be met to their full extent for the safety of the patients, operators, and the environment—when any person assembles or modify a medical electrical system by combing it with other equipment.</li> </ul>			
IMPORTANT	<ul> <li>IEC 60601-1-2:2005 Electromagnetic Interference</li> <li>IEC 60601-1-3:2005 Radiation Protection</li> <li>IEC 60601-1:2005 Standards for Medical Electrical Equipment</li> <li>IEC 60950-1: 2nd edition:2005 Standards for Information Technology Equipment</li> <li>IEC 60601-2-7 and IEC60601-2-28: X-ray Tube Heads</li> <li>IEC60364-7-710: 2002 Local Code Requirements for Electro-Medical System Installation</li> <li>IEC 60601-1-1:2005 regulation shall be met to their full extent for the safety of the patients, operators, and the environment—when any person assembles or modify a medical electrical system by combing it with other equipment.</li> <li>Any equipment not provided by VATECH can be connected when the following standards have complied</li> </ul>			


## 1.4 Marks and Symbols

Symbols	Description	Location
4	Dangerous voltage	Power board / Inverter board / Monoblock
	Protective earth (Ground)	Column
0	Off (power: disconnected to the <b>Main Power Switch</b> )	Main Power Switch
	On (power: connected to the <b>Main Power Switch</b> )	Main Power Switch
$\sim$	Alternate Current	Label
Ŕ	Type B Applied Equipment (IEC 60601-1: Degree of protection against leakage current and electric shock: Class 1 equipment)	Label
	Radiation hazard	Label
<b>C E</b> 2460	The CE symbol indicates that this product complies with the European Directive for Medical Devices 93/42/EEC as amended by 2007/47/EC as a class IIb device.	Label
	Warns ESD hazard.	MCU board / Board package


# Page Intentionally Left Blank

### 2.1 Room Requirements

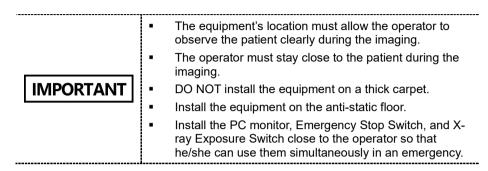


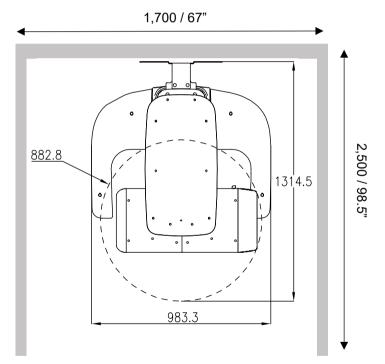

<Without CEPH Unit (optional): 2,500 mm (L) x 1,700 mm (W) or wider >

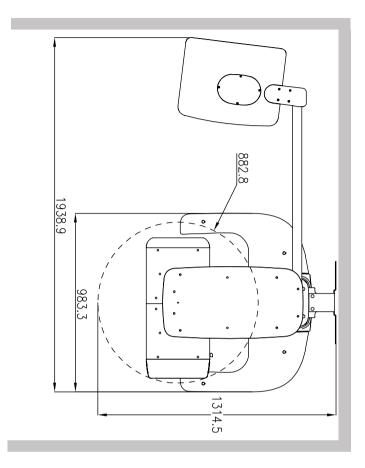

<With CEPH Unit (optional): 2,500 (L) x 2,500 mm (W) or wider >

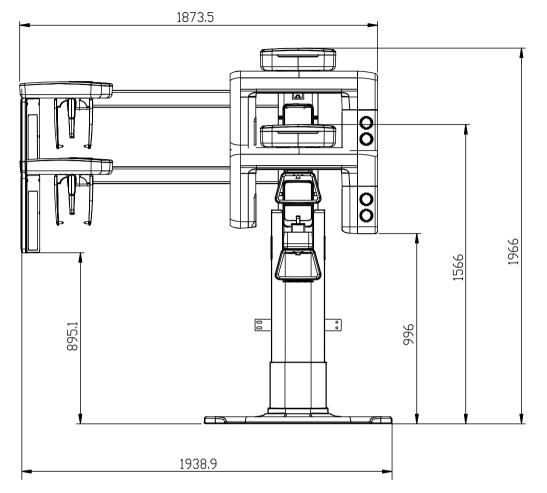

<Ceiling Height: 2,700 mm (H) or higher >

#### **Minimum Space Required**

Without CEPH unit	2,500 mm (L) x 1,700 mm (W) x 2,700 mm (H)	
With CEPH unit	2,500 mm (L) x 2,500 mm (W) x 2,700 mm (H)	

#### Lead Thickness

≥ 1 mm

#### The width of the Entrance

The X-ray room door should have a clearance of more than 800 mm (31.5") wide.

#### Floor Area

The floor of the X-ray room must be stable and level for system balance.

The floor must be able to support a minimum weight of 500 kg/m<sup>2</sup> (110 lbs. / feet<sup>2</sup>)

#### **Protection against Radiation**

- To protect against radiation hazards, follow all federal and municipal requirements.
- During exposure, the operator should follow applicable radiation shielding requirements and remain at least 2m (7') from the source of the radiation.
- Maintain visible contact with the patient and a clear view of indicators such as the PC's warning lamp and imaging status.

## 2.2 Specifications for Electrical Installation

These specifications are based on the **MEIGaN** (Medical electrical installation guidance notes).

Consult the companion manual for further information: **Volume 3: Specification for Electrical Installation**.

#### 2.3 Electrical Requirement


	This equipment must be connected to a grounded outlet to fulfill the safety provisions specified in <b>IEC 60364: the 2<sup>nd</sup> edition (2006).</b>
	Both PC and equipment must use the same power line if they are connected to an MPSO. Whenever not possible, use different power outlets for each device. If a multiple portable socket outlet (MPSO) must be used, ensure that the PC and equipment are connected to the same MPSO.
	Use a dedicated power outlet for the power cord. Failure to do so may result in unstable system operations caused by power fluctuations.
NOTICE	It is strongly recommended that you install an AVR. An AVR (automatic voltage regulator) for continuous operation in the event of power fluctuation.

#### 2.4 Exposure Switch Installation Options

You can install The Exposure Switch in three ways, based on how the user decides to operate the equipment. However, we highly recommend our installers install an Exposure Switch following **Option No. 2** to guarantee the operator's safety and the equipment's best performance.


#### Option No. 1:

The user operates the Exposure Switch from inside the X-ray room.

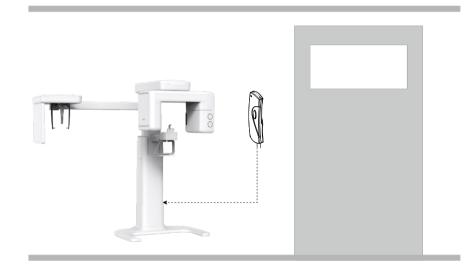


#### Option No. 2:

The user operates the **Exposure Switch** from outside of the X-ray room. The switch holder is mounted outside the room as well.

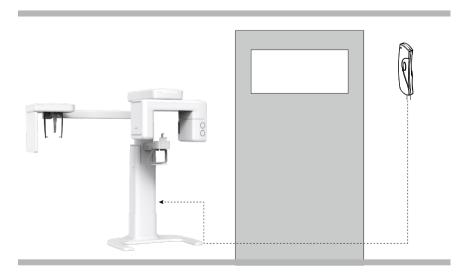


#### Option No. 3:


The user operates the 3rd party Exposure Switch (not provided by VATECH). In this case, go to **Appendix C Connecting the 3rd party, The Exposure Switch,** for more information.

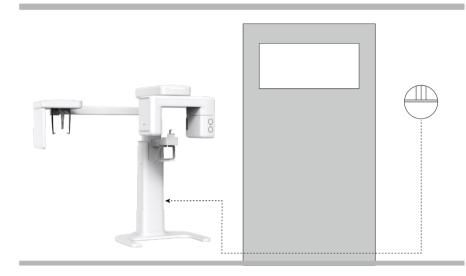



### 2.5 Installation Versions
 
#### Base Stand Type (with CEPH unit)

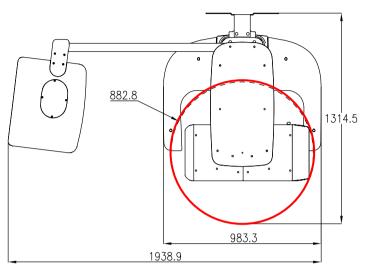


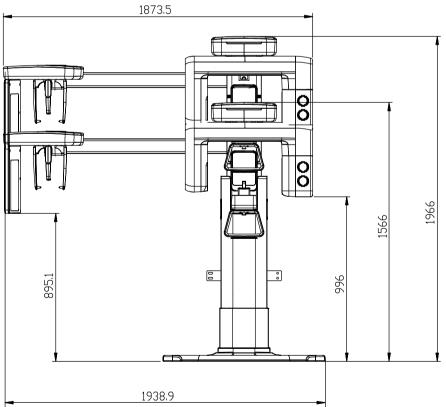




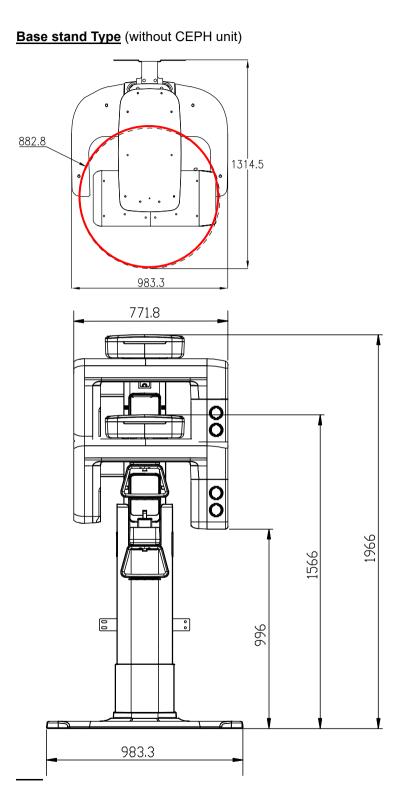


#### Non-Base stand Type (with CEPH unit)

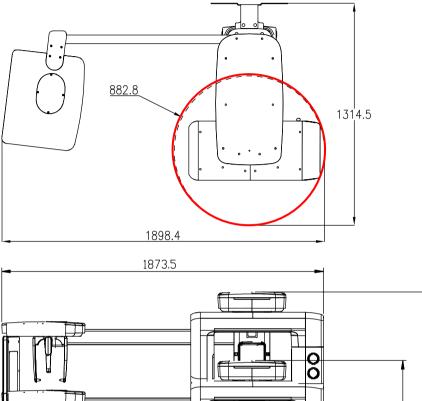

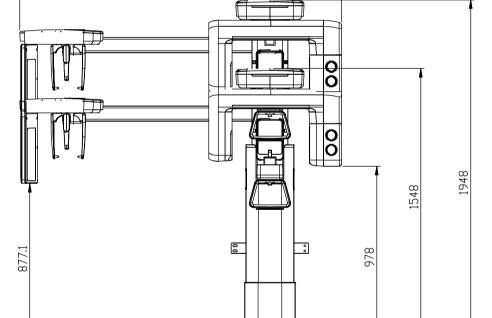



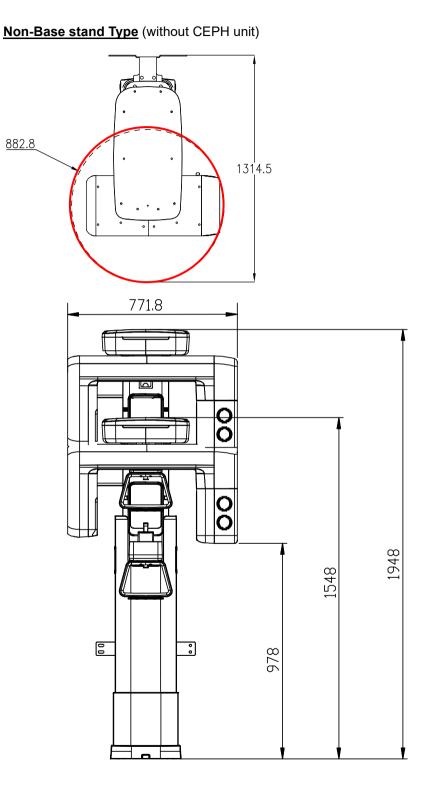

#### 2.6 Installing the Warning Lamp and Door Interlock Switch

Refer to **Appendix A** for a complete installation guide.

- This system can be equipped with a warning lamp and the Door Interlock Switch, activated when the X-ray is energized.
- The warning lamp and Door Interlock Switch are not included with the equipment.
- The warning lamp and the Door Interlock Switch must be installed by a qualified technician.

#### 2.7 Installing the Emergency Stop Switch

Refer to Appendix B for a complete installation guide.

- Install the Emergency Stop Switch along with the main power cable in the central distribution panel.
- Install this switch so that it is within easy reach of the operator but cannot be accidentally pressed.
- The switch must be a fool-proof model.

Before or during the installation, ensure to go over checklists from No.3 to No.6 in **Appendix E. Installation Checklist.** 

# 3. Before Installing the System

IMPORTANT

**Required Tools** 

3.1

The following tools are required to install the **vatech A9**.

ltem	Figure	Size	
Wrench Set	Contraction of the second seco	1.5 mm -10 mm (0.06" - 0.4")	
T-shaped Hex Wrench		6 mm - 10 mm (0.24" - 0.4")	
Hex Wrench w/ Handle		6 mm - 10 mm (0.24" - 0.4")	
Ratchet Wrench	63	Tips: 3 mm - 8 mm (0.12" - 0.3")	
Needle-nose Pliers		Regular	
Monkey Wrench		N/A	
Cross Head Screwdiverw/ Magnetic Tip		L = 200 mm (7.9")	
Spirit Level		N/A	

# English

Item	Figure	Size
Anti-Static Glove	-	N/A
Knife		N/A
Tape Ruler	(for Wall Mount type)	5 m
Marker Pen (thick tip)	(for Wall Mount type)	N/A
Hammer	(for Wall Mount type)	N/A
Multimeter		N/A
Hammer Drill	(for Wall Mount type)	L = 200 mm (7.9")
Transport Dolly		N/A

## 3.2 Checking the ShockWatch and TiltWatch

**VATECH** carefully inspects all equipment before shipping. But installers are strongly recommended to check the conditions of the ShockWtch and TilltWatch before opening the package, as well as the package's overall condition.


IMPORTANT	The installers and supervisors must check the conditions of indicators on each package before opening it.
NOTICE	<ul> <li>The ShockWatch and TiltWatch are affixed only to the main box, which contains the equipment.</li> <li>The ShockWatch and TiltWatch turn red as the package receives a shock during transportation. However, the color change does not necessarily mean that the equipment has been damaged.</li> </ul>

Check the following before opening each package:


- 1. Inspect all packages for external damages.
- 2. Find the **ShockWatch** and **TiltWatch** (see the image below), which are affixed to the main box that contains the equipment, and check if their color has changed.



If you see that the **ShockWatch** and **TilltWatch** have been activated or find damage on the package, do not open it, and contact your VATECH service representative.

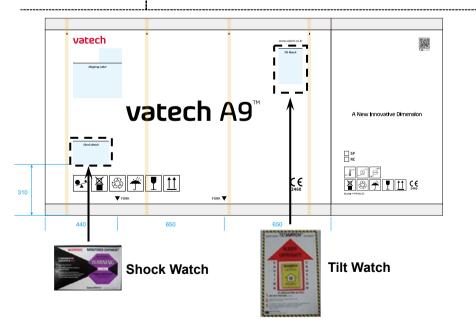


#### 3.3 Unpacking Boxes

 

#### 3.3.1 Box No. 1 - Main Box


Component	Size (mm / inch)	Weight (kg/lbs.)
<ul> <li>Column and Rotating Unit Assembly</li> <li>Accessories and Parts</li> <li>PC System (Optional)</li> <li>Monitor (Optional)</li> </ul>	1760 (L) x 700 (W) x 1350 (H) / 69.29 (L) x 27.56 (W) x 53.15 (H)	221 / 487

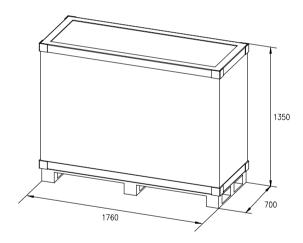


#### Removing the Cover

To remove the main box cover:

- 1. Move the **main box** to a convenient place close to the installation site.
- 2. Remove the strapping bands around the box and lift the top cover.

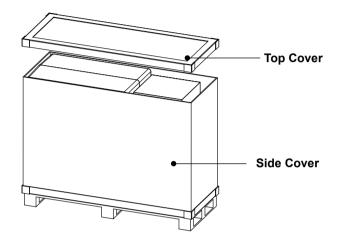

 
3. After removing the side cover, the main box shall look like the image below.




Main Unit


#### 3. Before Installing the System


- 4. Remove the plastic wrap covering the box with a cutter
- 5. Remove foams covering the Main Unit and open the accessory box, as shown in the image below.

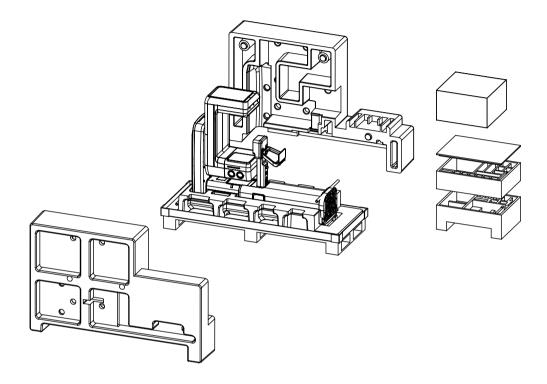

• CEPH Box Configuration

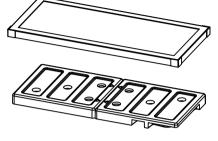


 

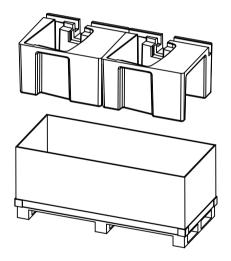



#### **Transportation**

1. Pull out the Main Unit from the pallet using the carrying handles as in the image below. (There are two handles attached to the top and bottom of the unit)

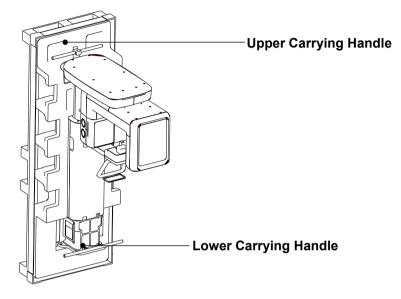

2. Put the main unit with the EPS (Main Base) on a Transport Dolly and move it to the installation site.

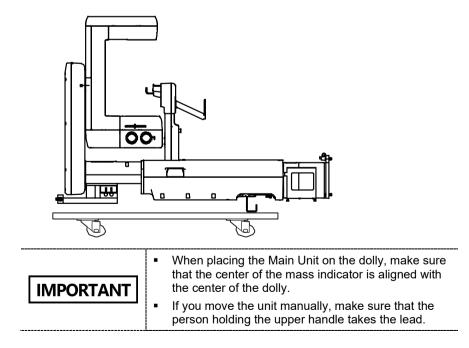


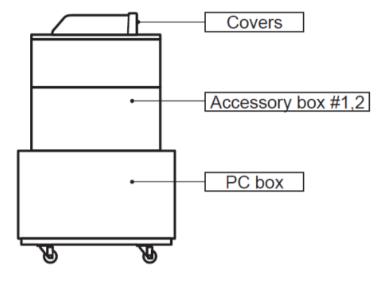

<Transportation Example>

# 3.4 Checking the Parts

# 3.4.1 Location Layout of the Parts and Accessories

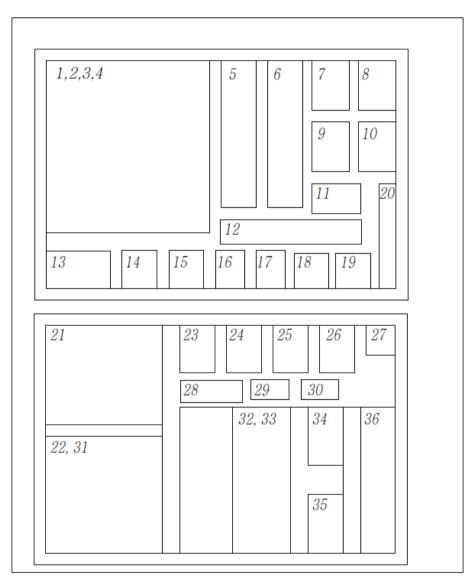

# 3.4.2 Parts List

In the	Accessory	Box	1	& :	2

Part No.	Items	Specification	Figure	QTY	Comment s	Confirmed (OK?)
		User Manual		1		Yes 🗆 No 🗆
		Installation Manual		1		Yes 🗆 No 🗆
	Manuals	2D Viewer Manual		1	For EzDent-i	Yes 🗆 No 🗆
		3D Viewer Manual		1	For Ez3D-i	Yes 🗆 No 🗆
1	Installation USB		1. 5050 A	1		Yes 🗆 No 🗆
	3D / 2D Viewer License Key		6500	1	EzDent-i & Ez3D-i	Yes 🗆 No 🗆
	SP Sticker		0	1	For Pano Option	Yes 🗆 No 🗆
	Exposure Switch		6	1		Yes 🛛 No 🗆
2	Holder		E	1		Yes 🛛 No 🗆
	Double- Sided Sticker		****	1		Yes 🛛 No 🗆
	Screws	M3 x 8	*****	3		Yes □ No □
3	Carpus Plate			1	СЕРН	Yes 🛛 No 🗆
	Handrest Sticker			1	Option	Yes 🗆 No 🗆
4	Alignment Plate			1	Floor Mount Option	Yes 🛛 No 🗆

# 3. Before Installing the System

Part No.	Items	Specification	Figure	QTY	Comment s	Confirmed (OK?)	
5	Left Blank Intentionally						
6	Anti-Static Gloves			1 pair		Yes 🗆 No 🗆	
7	Chinrest	Special	Ø	1		Yes 🗆 No 🗆	
8		Le	eft Blank Ini	tentionally			
9	Chinrest	Normal		1		Yes 🗆 No 🗆	
10		Le	eft Blank In	tentionally			
11	Sanitary Vinyl Cover	For Normal Bite	Panorama Cover 300 pcs	1		Yes 🗆 No 🗆	
		Normal		1		Yes □ No □	
12	Bite /Block	Deep*	P	1	*Available only in some Asian countries.	Yes 🛛 No 🗆	
		Special A	P	1		Yes 🗆 No 🗆	
		Special B		1		Yes 🗆 No 🗆	
13		Le	eft Blank Int	tentionally	1		
14	Сар	For Ear Rods		2	CEPH Option (2: on the equipment)	Yes 🛛 No 🗆	
	Silicon Cover	For Nasal Positioner		1	CEPH Option: extra	Yes □ No □	
15		Le	eft Blank Int	tentionally			
16	Silicon Cap	White		14		Yes □ No □	
17	Base Cap	White Silicon	7	4	Base Option	Yes □ No □	

Part No.	Items	Specification	Figure	QTY	Comment s	Confirmed (OK?)
18	Terminal Cap	White Silicon		2		Yes 🗆 No 🗆
19		L	eft Blank In	tentionally		
20	Cable Tie			10	-	Yes 🗆 No 🗆
21	Cable	Ethernet Cable	$\mathcal{O}$	1		Yes 🗆 No 🗆
	Ethernet Card			1		Yes 🗆 No 🗆
22	Protractor			1	-	Yes □ No □
23	Wrench Bolt	M10 x 25 w/ Spring and Flat Washer		4	Base Option	Yes □ No □
24	Wrench Bolt	M8 x 20		2	Base Option	Yes 🛛 No 🗆
25	Wrench Bolt	M8 x 20		4	Ceph Option	Yes 🛛 No 🗆
25	C_E_Washer		0	4	Ceph Option	Yes 🛛 No 🗆
26	Truss Bolt	M4 x 6	<b>aa</b> a()	13	Base Option	Yes 🗆 No 🗆
27	Pan Head Screw	M4 x 6		11		Yes 🗆 No 🗆
	Ceph Cover	-		1		Yes 🗆 No 🗆
28	Washer Head Screw	M3 x 6		2		Yes 🗆 No 🗆
29	Flat Head Screw	M4 x 8		2		Yes □ No □
30	Socket Set Screw	M10 x 15		4	Floor Mount Option	Yes 🗆 No 🗆
31	Wall Plate			1		Yes 🗆 No 🗆
31	Terminal Block 3 Pole			1		Yes 🗆 No 🗆


# 3. Before Installing the System

Part No.	Items	Specification	Figure	QTY	Comment s	Confirmed (OK?)
	Wall Mount Cap	Silicon		12		Yes 🗆 No 🗆
32	Wall Mount Cap	Silicon		5	For the USA only	Yes 🗆 No 🗆
	UP / DOWN Switch Sheet			2		Yes 🛛 No 🗆
	UP / DOWN Switch		9	1		Yes □ No □
	UP / DOWN Switch Holder		P	1		Yes 🗆 No 🗆
	UP / DOWN Switch Sticker		(33)	1		Yes □ No □
33	Flat Head Screw	M3 x 8	G	3	Optional	Yes 🗆 No 🗆
	Middle Wall Bracket			1	-	Yes 🗆 No 🗆
	Wrench Bolt	M8 x 25 (2 Sems)	(jj l	2		Yes 🗆 No 🗆
	Nut	M8	00	2		Yes 🗆 No 🗆
	Wall Mount Cap	Silicon		4		Yes 🗆 No 🗆
	Wood Screw	M12 x 70	< <b></b> \$\$0	2	For Wood	Yes 🗆 No 🗆
34	Anchor Bolt	5/16 x 60 w/ Spring and Flat Washers	()))]	4	For Concrete	Yes □ No □
	Wood Screw	M8 x 60	< <del></del> ¥£D	4 (USA: 8)	For Wood	Yes 🛛 No 🗆
	Spring Washer	M8	Q	4 (USA: 8)	For Concrete	Yes 🗆 No 🗆

3. Before Installing	the System
----------------------	------------

Part No.	Items	Specification	Figure	QTY	Comment s	Confirmed (OK?)
	Flat Washer	M8	$\bigcirc$	4 (USA: 8)	For Concrete	Yes 🗆 No 🗆
	Flat Anchor Bolt	M8 x 30	0	4 (USA: 8)	For Concrete	Yes 🛛 No 🗆
	Hex Bolt	M8 x 15	Cumme	4 (USA: 8)	For Concrete	Yes 🗆 No 🗆
	Wrench Bolt	M8 x 20 w/ Spring and Flat Washers		2	For Wall Bracket	Yes 🛛 No 🗆
35	Nut	M8	00	2	For Wall Bracket	Yes 🗆 No 🗆
	Wrench Bolt	M8 x 15 w/ Spring and Flat Washers		4	For Wall Bracket	Yes 🛛 No 🗆
	Wall Bracket	-		1	For the USA only	Yes 🛛 No 🗆
36	Wall Bracket	-		1	All countries except the USA	Yes 🛛 No 🗆

# Another location

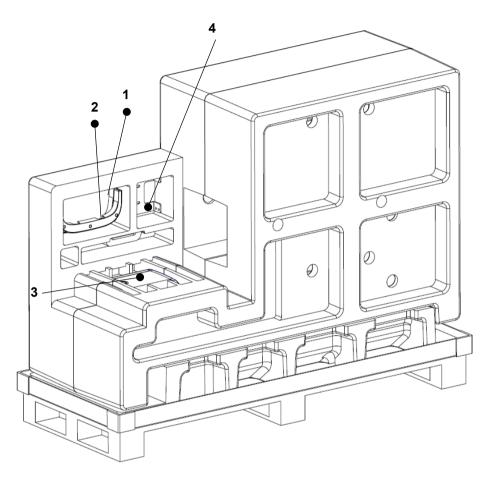


Part No.	Items	Specification	Figure	QTY	Comments	Confirmed (OK?)
1	Base Top Cover Rear	-	5	1		Yes 🗆 No 🗆
2	Base Top Cover Front	-	( and a start	1		Yes 🛛 No 🗆
3	Column Rear Cover			1		Yes 🗆 No 🗆
4	Column Bracket	-		1		Yes 🗆 No 🗆

# 4. Installing the Equipment: Base Stand (Optional)

# 4.1 Assembling the Base and the Main Unit

To assemble the base and the main unit:

1. Remove bolts on the lower carrying handle using an Allen Wrench.

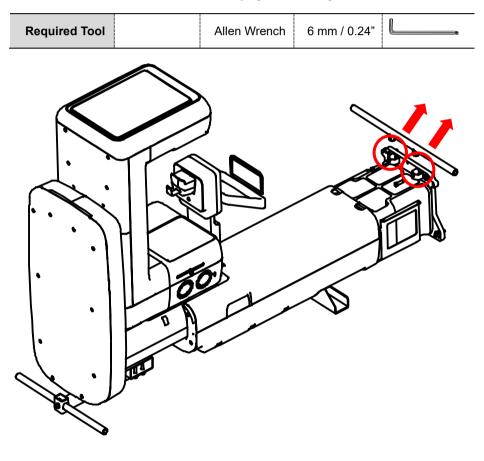





If you are installing the equipment on a concrete floor, go to t **4.4 Fixing the base (Optional)** and completing step 1 first. Then return to the **4.1 Assembling the Base and Main Unit**. English

#### 4. Installing the Equipment: Base Stand (Optional)


2. Put two wrench bolts into the holes (**see below)** and loosely tighten them with an Allen Wrench to connect the Base Unit to the Column Unit.

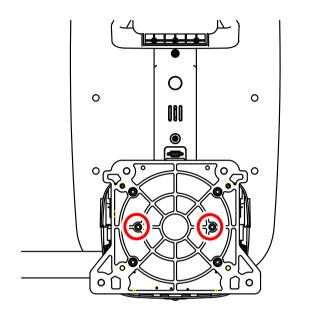


Required Tool	Allen Wrench	6 mm / 0.24"	
Parts and Accessory	Wrench Bolt	M8 x 20 - 2 pcs (Part No. 24)	

 

3. Connect the Base Unit to the Column Unit using the two bolts provided. Insert the bolts into the locations indicated in the image below.

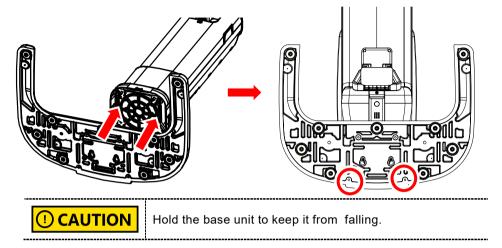

4. Tighten them with an Allen Wrench to connect the Base Unit to the Column Unit.

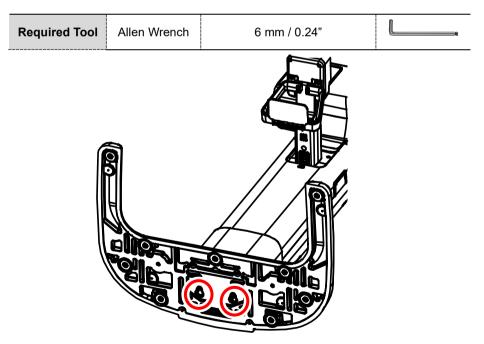

#### 4. Installing the Equipment: Base Stand (Optional)


- Entitle equipment slowly using the upper carrying the
- 5. Lift the equipment slowly using the upper carrying handle.

**CAUTION** 

Keep the cables away when erecting the equipment.


6. Insert a Wrench Bolt into each hole at four corners of the Column Unit. Tighten them with an Allen Wrench to fix the Column Unit on the Base.

Required Tool	Allen Wrench	6 mm / 0.24"	L
Parts and Accessory	Wrench Bolt	M10 x 25 w/ Spring and Flat Washers – 4 pcs (Part No. 23)	

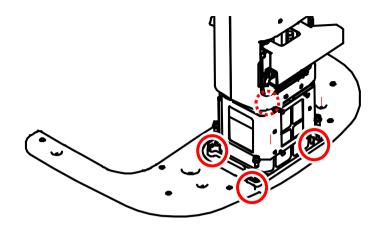


7. Remove the top carrying handle using an Allen Wrench.

	Required Tool	Allen Wrench	6 mm / 0.24"	L
--	---------------	--------------	--------------	---

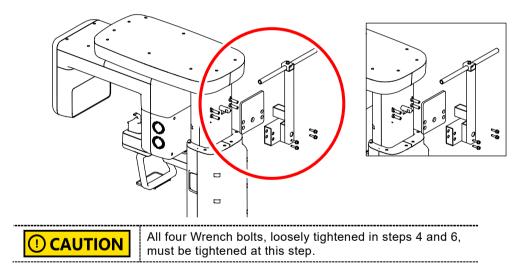

8. Loosen the four bolts with an Allen Wrench and remove the part attached to the Column.

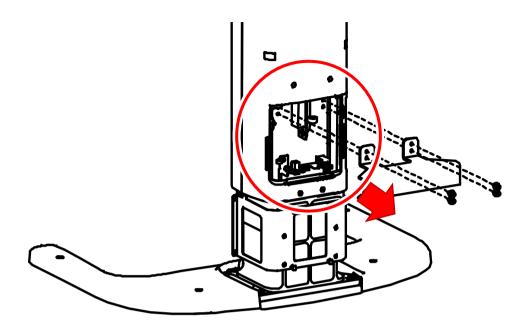


# 4.2 Installing the CEPH Unit (Optional)




DO NOT hold the areas of the collimator, sensor, and tube head.


1. Open the CEPH box and take out the components.

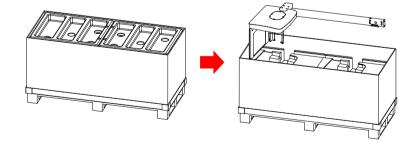

1. Remove the plastic wrap covering the Column Unit and the CEPH cable.


2. Push the CEPH arm in the direction indicated below. Ensure that all four studs come through holes.

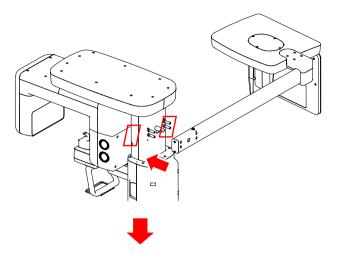

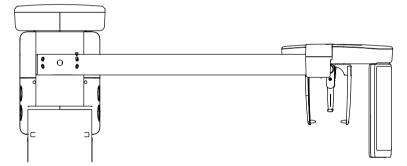

3. Put the four wrench bolts into each hole and tighten with an Allen Wrench to fix the CEPH arms on the Main Unit.

Pequired Teel	Allen Wrench	6 mm / 0.24"	L
Required Tool	Allen Wrench	8 mm / 0.31"	Ĺ,
Parts and	Wrench Bolt (w/ C E Washer)	M8 x 20 - 4 pcs (Part No. 25)	
Accessory	C_E_Washer	4 pcs (Part No. 25)	$\bigcirc$

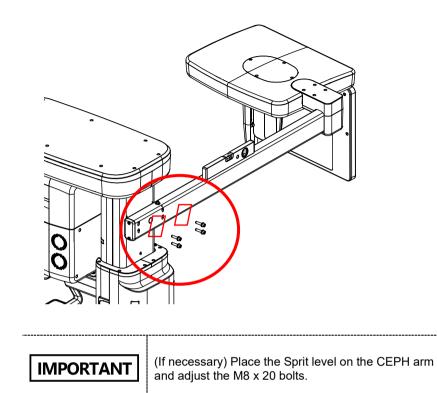


\_\_\_\_\_

- Connect the Fiber Optic Cable and the Cable Harness. Optic Cable Cable Harness Cable Harness When managing the fiber optic cable, DO NOT bend, pull, or crush it. Ensure to remove the fiber optic cable before connecting it. DO NOT touch the cable's tip. Insert the fiber optic cable until you hear a 'click'
- 5. Assemble the Cable Cover using the two bolts provided.

sound.

4.

Parts and	Washer Head	M3 x 6 - 2 pcs	Ĩ
Accessory	Screw	(Part No. 28)	

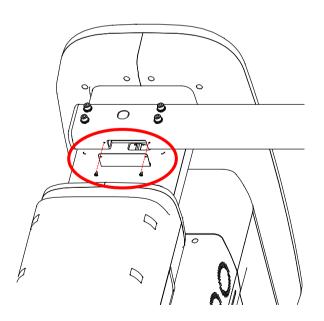

# 4.3 Installing the Wall and Column Brackets

#### Assembling the Column Bracket




The column bracket must be installed. Otherwise, the equipment may vibrate during scanning.

- 1. Move the equipment close to the wall selected for the installation.
- 2. Remove the plastic wrap covering the Column Unit with a cutter.
- 3. Prepare the Column Bracket.

Parts and Accessory	Column Bracket	-	
------------------------	----------------	---	--

4. Assemble the column bracket on the back of the Column Unit using the four Wrench Bolt provided.

Required Tool	Allen Wrench	6 mm / 0.24"	L
Parts and Accessory	Wrench Bolt	M8 x 15 w/ Spring and Flat Washers - 4 pcs (Part No. 35)	

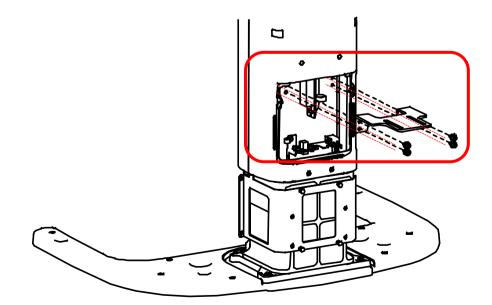

#### **Combining Column and Wall Brackets**

1. Prepare the Wall Bracket.


Parts and Accessory	Wall Bracket	-	

2. Connect the Wall Bracket to the Column Bracket previously assembled in the Column Unit's back, using two bolts and nuts provided.

	Allen Wrench	6 mm / 0.24"	L,		
Required Tool	Monkey Wrench	-			
Parts and Accessory	Wrench Bolt	M8 x 20 w/ Spring and Flat Washers (Part No. 35) - 2 pcs			
	Nut	M8 - 2 pcs (Part. No. 35)	00		
(Part. No. 35)					
<b>CAUTION</b> DO NOT tighten the bolts fully yet.					

#### Marking Points on the Wall

- 1. Move the equipment close to the installation site.
- 2. Move the wall bracket until it touches the wall.

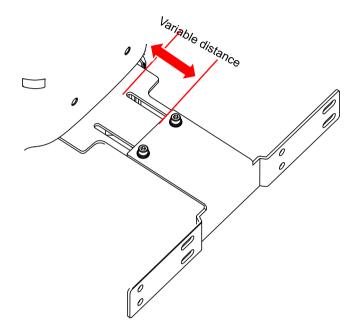

3. Mark the anchor bolt locations on the wall.

Required Tool	Marker	N/A	A 1988
	<b>_</b>		
0	$\supset$		
0.			


#### **Drilling on the Wall**

1. Drill the wall holes of size 10.5 mm x 30 mm (depth) using the concrete hammer drill.



- 2. Remove the debris and clean the holes using the dust pump.
- 3. Using the hammer, insert a Ficher strong anchor into the hole.

Required Tool	Hammer	N/A	{ <u></u>
Parts and Accessory	Flat Anchor Bolt	M8 x 30 (Part. No. 34) - 4 pcs	

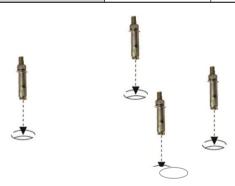


4. Using the hammer, insert an EHS tool into the inner bolt.

Required Tool	Hammer	N/A	{ <u></u> ~
Parts and Accessory	EHS tool	EAW H 8 x 30	


#### Combining the Equipment with the Anchor Bolts

1. Place the equipment on the alignment plate while observing four Hex bolts appropriately inserted through each hole.

Required Tool	Torque wrench	Spanner type	202
Parts and Accessory	Hex Bolt	M8 x 15 (Part. No. 34)	
	Spring washer	M8 (Part. No. 34)	Q
	Flat washer	M8 (Part. No. 34)	$\bigcirc$

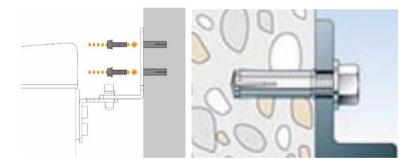

2. Remove the Lower carrying handle.

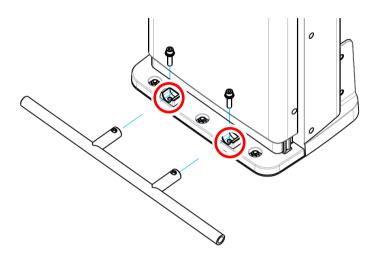


# 4.4 Fixing the Base (Optional)

# Concrete Floor

Required Tool	Hammer Drill	L = 200 mm (7+9")	
	Ratchet Wrench	Tips: 3 mm - 8 mm (0.12" - 0.3")	
	Hammer	N/A	
Parts and Accessory	Anchor Bolt	5/16 x 60 w/ Spring and Flat Washers - 2 pcs (Part No. 34)	( <b>)</b>
	Spring washer	M8 - 2 pcs (Part No. 34)	Q


1. Place the Base Unit on the floor where you plan to install the equipment. And mark two locations to insert anchor bolts. (**see below**)

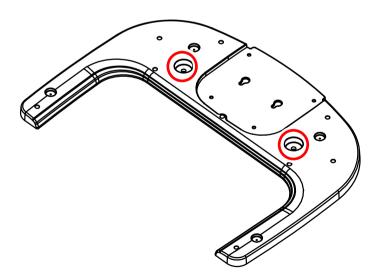


2. Drill the floor holes of size 12 mm x 30 mm (depth) using the concrete hammer drill.



- 3. Remove the debris and clean the holes using the dust pump.
- 4. Remove nuts and washers, and put the anchor bolts into the holes.

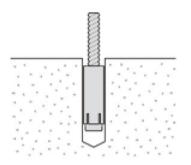

5. Secure the anchor bolts with the hammer.

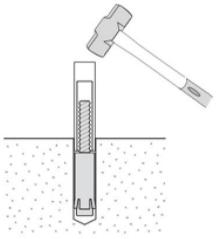

#### 4. Installing the Equipment: Base Stand (Optional)


6. Place the base unit combined equipment in the proper position, and lock the nuts and washers using a ratchet wrench.



### Wooden Floor

Required Tool	Hammer Drill	L = 200 mm (7.9")	
Parts and Accessory	Wood Screws	M12 x 70 – 2 pcs (Part No. 34)	< <u></u> ]

1. Secure the base unit using the wood screws provided.

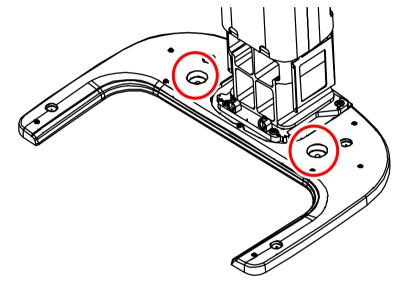

# 4.5 Connecting the Cables to the Equipment.

1. Connect the Ethernet and other cables in the back of the Column Unit, as shown in the figure.

		Ethernet Cable	(Part No. 21)	
	s and ssory	Cable Tie	(Part No. 20)	
AUG	3301y	Exposure Switch	(Part No. 2)	Ì



Ethernet Cable

, K								
	Required Tool	Cross Head Screwdriver w/ Magnetic Tip	L = 200 mm (7.9")					
	Parts and Accessory	Column Rear Cover	-					
		Truss Bolt	M4 x 6 – 2 pcs (Part No. 27)	<b></b> ()				
	NOTICE	Ensure that all cables (connected in step 1) come out of the hole located at the Column Rear Cover's center.						
	NOTICE	Use the Cable Tie (Part No. 20) to tie the cables before putting the Column Rear Cover.						

2. Assemble the Column Rear Cover with two truss bolts and a screwdriver. (see below)

-


# 4.6 Removing the Transportation Safety Bolts

- 1. Lift the Vertical Frame Unit Cover, as shown in the figure.

2. Remove two Safety Bolts (see important) along with their tags.

Required Tool	A	llen Wrench	6 mm / 0.24"	
	۷	Avoid damaging the cables when you are removing the safety bolts.		
IMPORTAN	T		olts are located insi as indicated in the	


3. Turn the Rotator Unit clockwise (DO NOT place back the Vertical Frame Cover yet.)

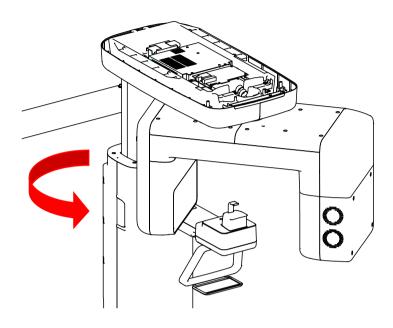

# 4.7 Leveling the Equipment


Required Tool	T-shaped Hex Wench	8 mm / 0.3"			
	Spirit Level	N/A			
IMPORTANT	Ensure to place the Spirit Level on the indicated locations in this manual for an accurate reading.				

- 1. Prepare a Spirit Level.
- 2. Turn the Rotating Unit clockwise so that the X-ray tube head faces the front.
- 3. Turn all nine screws in marked locations clockwise.

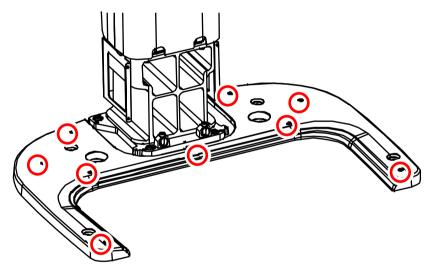


# Leveling Right and Left

1. Place the Spirit Level horizontally, as shown in the image.

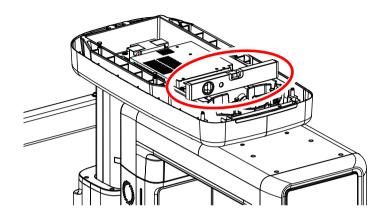


2. Turn Screws in marked locations left and right until the Sprit Level bubble comes to the center.

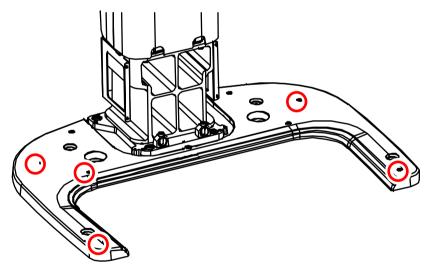


#### Leveling the Front and Back

1. Place the Spirit Level vertically, as shown in the image.

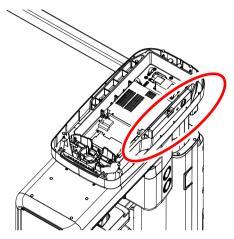

2. Turn Screws in marked locations left and right until the Sprit Level bubble comes to the center.

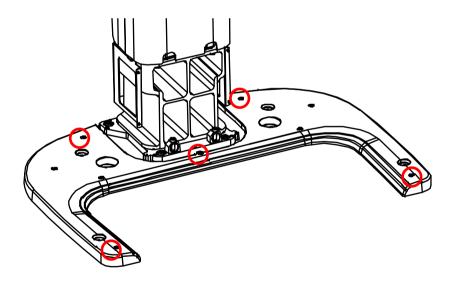


3. When leveling the equipment is completed, ensure to tighten all eight Screws until they no longer move.

## 4.8 Tightening the Bolts

1.

 Required Tool
 Allen Wrench
 6 mm / 0.24"

 Monkey Wrench
 N/A

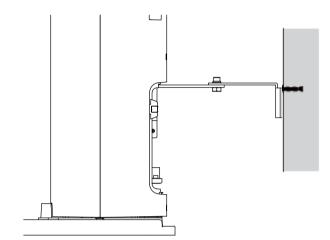


Tighten two bolts conjoining the column and wall brackets.

## 5. Installing the Equipment: Wall Mount

## 5.1 Installing the Equipment

You are advised to plan and study the installation environment carefully before proceeding since it involves drilling the wall and floor. Pre-installation planning is crucial to a successful installation.

Accurate marking is of critical importance for a successful installation.

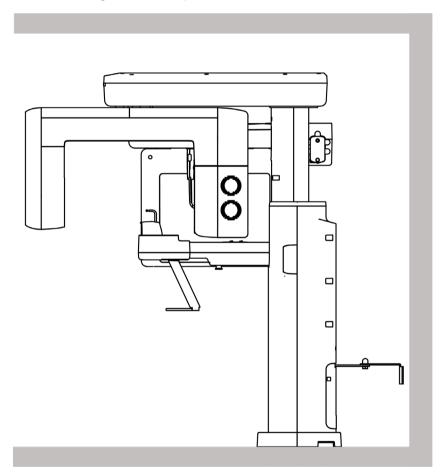


**Installation Overview** 

#### Marking Points on the Floor

1. Put the aligning plate on the floor near the wall where you plan to install the equipment, as shown in the figure.

Parts and Accessory	Alignment Plate	(Part No. 4)	0	0
------------------------	-----------------	--------------	---	---

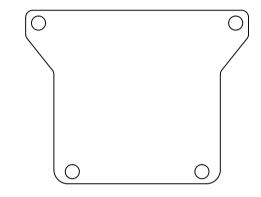

2. Mark 4 anchor bolt holes on the floor.

Required Tool	Marker	N/A	A COM
(	0	$\bigcirc$	
	<u></u>		


#### **Drilling the Floor**

- 1. Remove the aligning plate.
- 2. Drill the floor holes (size: 10.5 x 30 mm) by using the concrete hammer drill.
- 3. Remove the debris and clean the holes with the dust pump.
- 4. Put the anchor bolts into the holes and attach them with the hammer. Verify that the anchors are secured.


Required Tool	Hammer Drill	L = 200 mm (7.9")	
Parts and Accessory	Anchor Bolt	5/16 x 60 w/ Spring and Flat Washers - 4 pcs (Part No. 34)	( <b>)</b>

### Combining the Equipment with the Anchor Bolts

1. Insert an Anchor Bolt into each hole on the Alignment Plate.

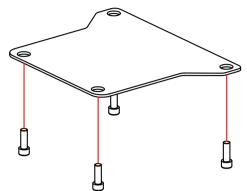


2. Grab the upper carrying handle and lift the equipment slowly until it stands on the floor, as shown in the image below.

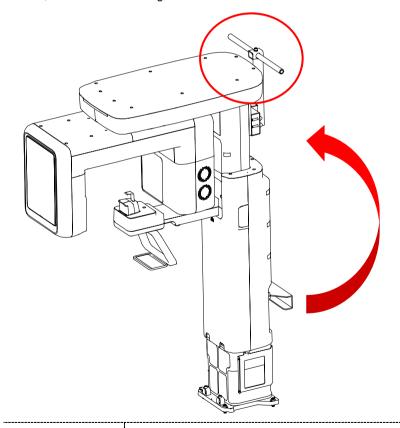




Be careful not to damage the cables before erecting the equipment. Keep them clear of the equipment.

3. Place the equipment over the Alignment Plate to insert each Anchor Bolt into a corresponding hole on the Column Bottom.

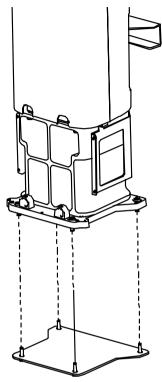

4. Place the washers and nuts on Anchor Bolts. Tighten each nut loosely with a fastener.

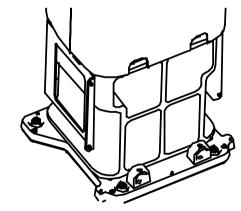

		•	DO NOT tighten the nuts until the leveling is completed.
 IMF	PORTANT	•	While one installer tightens the nuts, the other installers should hold the middle handle to prevent the equipment from falling.

## 5.2 Installing the CEPH Unit (Optional)

Please refer to section **4.2 Installing the CEPH Unit (Optional)**.

## 5.3 Installing the Wall and Column Brackets

Please refer to section 4.3 Installing the Wall and Column Brackets.

## 5.4 Connecting the Cables to the Equipment

Please refer to section 4.5 Connecting the Cables to the Equipment.


## 5.5 Removing the Transportation Safety Bolts

Please refer to section 4.6 Removing the Transportation Safety Bolts.

## 5.6 Leveling the Equipment

Required Tool	T-shaped Hex Wench	8 mm / 0.3"				
	Spirit Level	N/A				
IMPORTANT	Ensure to place the Spirit Levels only on the following figures' locations for an accurate reading.					


- 1. Prepare the Spirit Level.
- 2. Turn the Rotating Unit clockwise so that the X-ray tube head faces the front, as shown in the figure.

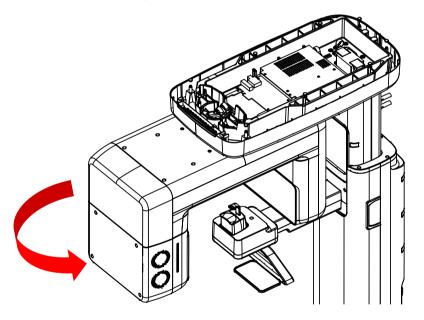


- Required Tool
   T-shaped Hex Wench
   8 mm / 0.3"

   Parts and Accessory
   Set Screw
   M10 x 15 – 4 pcs (Part No. 30)
   Image: Construction of the second se
- 3. Put the set screws into the four holes and turn them clockwise with the hex wrench until they touch the aligning plate.


4. Place the Spirit Level, as shown in the figure.

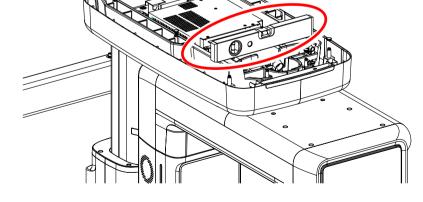

5. Place the Spirit Level on the Vertical Frame, as shown in the following figure.

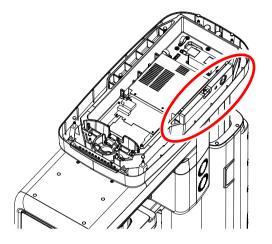


6. Tighten the nuts in the anchored bolts on the floor.

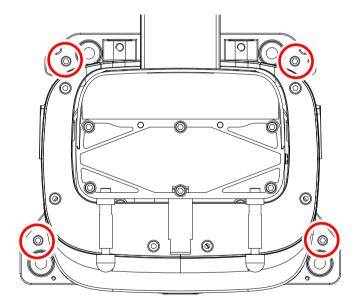


## 5.7 Tightening the Bolts

1. Tighten two bolts conjoining the Column and wall bracket.

	Allen Wrench	6 mm / 0.24"	
Required Tool	Monkey Wrench	N/A	

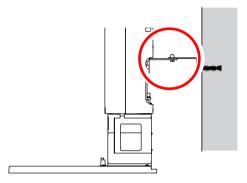

2. Tighten the nuts in the anchored bolts.

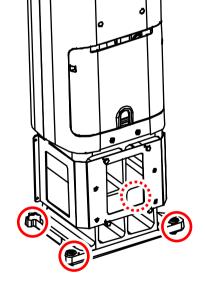


## 6. Completing Miscellaneous Works

## 6.1 Assembling Various Covers

### **Base Top Cover Front**

Required Tool	Cross Head Screwdriver w/ Magnetic Tip	L = 200 mm (7.9")	-
	Base Top Cover Front	-	( the state of the
Parts and Accessory	Pan Head Screw	M4 x 6 – 4 pcs (Part No. 27)	
	Silicon Cap (White)	4 pcs (Part No. 16)	

1. Assemble the Base Top Cover Front in front of the Column Unit with 4 truss bolts and a screwdriver. (**see below**)

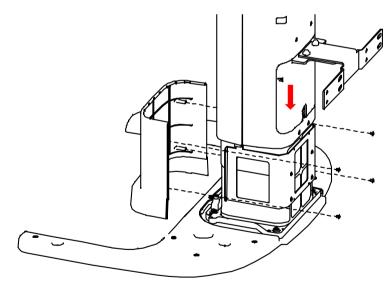


2. Put a silicon cap (white) into each hole to complete the step.

## Base Top Cover Rear


Required Tool	Cross Head Screwdriver w/ Magnetic Tip	L = 200 mm (7.9")	
	Base Top Cover Rear	-	S-S
Parts and Accessory	Pan Head Screw	M4 x 6 – 4 pcs (Part No. 27)	
	Silicon Cap (White)	4 pcs (Part No. 16)	

1. Assemble the Base Top Cover Rear in the Column Unit's back with two truss bolts and a screwdriver. (**see below**)

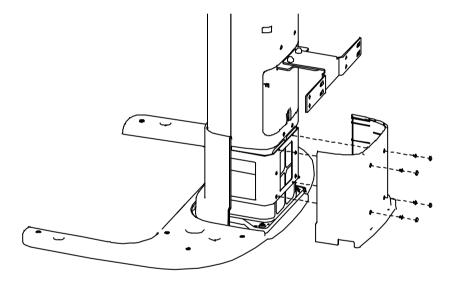

2. Put a silicon cap (white) into each hole to complete the step.

## 6.2 Assembling the Chinrest and Bite

 

1. Insert the normal Chinrest and the normal Bite Block into the unit. (see below)


Parts and	Chinrest (Normal)	1 pc (Part No. 9)	
Accessory	Bite (Normal)	1 pc (Part No. 12)	

## 6.3 Installing the Switch Holders


	UP / DOWN Switch Holder	1 pc (Part No. 33)	P
Parts and Accessory	UP / DOWN Switch	Optional - 1 pc (Part No. 33)	Q
,	Flat Head Screw	M3 x 8 – 3 pcs (Part No. 33)	E
	Sticker	(Part No. 33)	

### UP / DOWN Switch / Switch Holder


1. Choose a place where you want to install a UP/DOWN Switch Holder (You can install the holder on either the left or right side of the equipment).

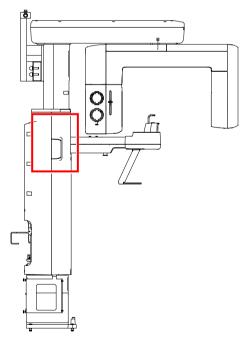


2. Assemble the UP/DOWN Switch Holder: Insert three Truss Bolts into holes on the holder (see below) and tighten them with a crosshead screwdriver until they no longer move.

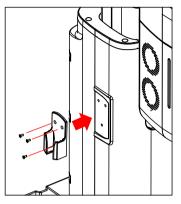

3. Attach a sticker on the other side of the equipment where you did not install the UP/DOWN Switch Holder

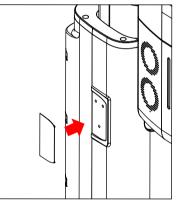


4. Hang the UP/DOWN Switch on the holder.

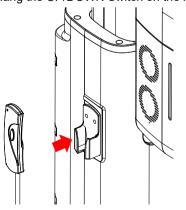

## 6.4 Installing the real miscellaneous works

- 1. Tighten the Wrench Bolts connecting the CEPH Arm (**see below**) until they no longer move.
- 2. Put a Silicon Cap on each bolt's top.

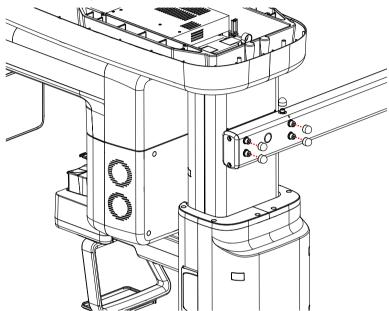


#### 6. Completing Miscellaneous Works


 Assemble the Vertical Top Cover with six Pan Head Screws and four Truss Bolts; once all bolts are tightened, put a Silicon Cap into each hole where a bolt is inserted.

(Pan Head Screws are marked with a square, and Truss Bolts are marked with a circle.)

Parts and	Pan Head Screw	M4 x 6 (Part No. 27)	
Accessory	Truss Bolt	M4 x 6 (Part No. 27)	<b>a</b> ma()

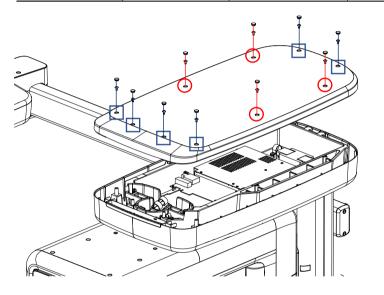


4. Put two Silicon caps on the bolt's top connecting the Joint Bracket.

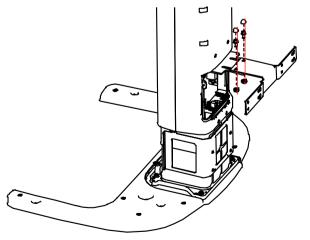


5. Insert two terminal caps on the Column Rear Cover.

	Parts and Accessory	Terminal Cap	2 pc (Part No. 18)	
--	------------------------	--------------	-----------------------	--

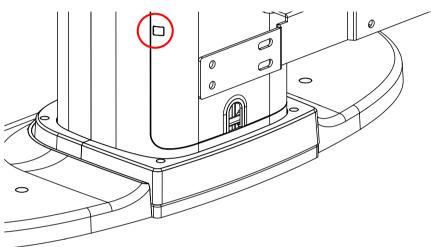

## 7. Setting up PC

## 7.1 Direct Connection Diagram

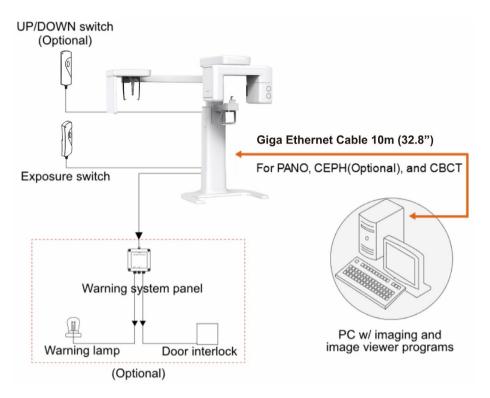

Giga Ethernet Cable - transfers image data to the PC.

**Warning System Panel** - provides a visible indicator: Light on when the equipment is irradiating X-ray.

#### 7.2 The Recommended PC Requirements

vatech A9 (Model: PHT-30CSS) Installation Manual

		It is mandatory to ensure that the PC system configuration is compatible with the imaging and image viewer software's PC system requirements.
	•	Since image quality may deteriorate from lack of resources, observe the requirement guideline specified in the following tables.
	•	The PC components shall be approved by UL/CSA.
	•	The PC shall be grounded well protectively.
IMPORTANT	•	The multiple portable socket outlets shall not be placed on the floor.
	•	In case the equipment is to be installed in an area with an unstable electric power supply, it is strongly recommended to use the AVR (automatic voltage regulator) to keep the line voltage stable.
		The PC system provided with the <b>vatech A9</b> undergoes a rigorous test for software compatibility before shipping. Therefore, any later changes to the hardware and software may cause malfunction.
	A	

Item	Specifications
CPU	Intel® Core i3-9100 3.6 4C
RAM	16 GB (2 x 8 GB) DDR4-2666 UDIMM NECC Memory APJ
HDD	1 TB SATA 7200 rpm 3.5 in WKS
Graphics board	GEFORCE GTX1050 Ti DUAL D5 4G
Ethernet Interface	Intel Ethernet I210-T1 PCIe x1 Gb NIC or LS-PCIE-EX210AT
Serial Port (RS232)	HP Serial Port Adapter Kit
Power Supply	500 W internal power module, up to 90% efficiency, active PFC
M.2 PCIe x1 2230 (for WLAN) M.2 PCIe x4 2280/2230 Combo (for storage) PCI Express v3.0 x1 PCI Express v3.0 x16 (wired as x4) PCI Express v3.0 x16	
CD/DVD drive	DVD-ROM, DVD+/-RW, Blu-Ray
Monitor	19" 1280x1024 screen resolution
Operating System	Windows 10 Professional 64-Bit OS
Recommended System	HP Z1G5

\*. If an ethernet card is not installed on your PC, purchase an Ethernet card separately.

#### Add an exclusion to Windows Security


1. Open the Start screen, and type **W** in the search box.




2. Click the **Windows Defender Security Center** icon to start Windows Defender Security Center on the search result.




- 3. The start page comes with the following sections: Virus & threat protection, Device performance & health, Firewall & Network protection, and Family options.
- 4. Click on the Virus & threat protection icon.

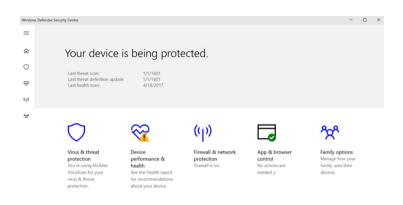


5. Click on the link Virus & threat protection settings.

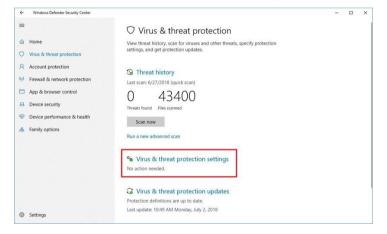


6. Scroll down to Exclusions.

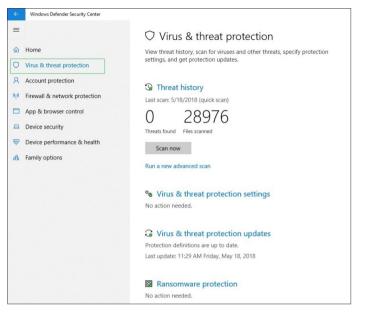

7. Click on the link Add or remove exclusions.

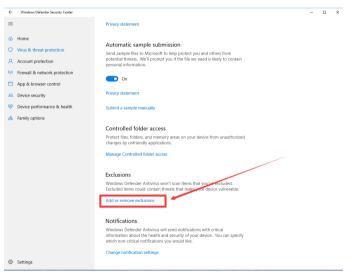

8. The following page will open.

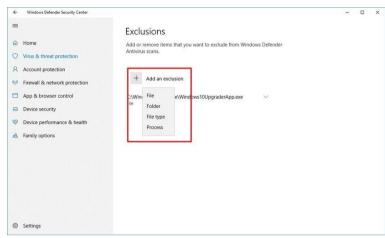

- 9. Click on the **Add an exclusion** button.
- 10. On the **Select Folder** window, type **C:\VcaptureSW** in the folder field and **click** Exclude this folder.


elect Folder				
← → · · ↑ 💻 > This PC	2 >		✓ Ö Search	This PC 🔎
Organize 👻				
📃 Desktop 🛛 🖈 ^ 🗸	Folders (6)			
🕹 Downloads 🖈		_	_	
🗄 Documents 🖈	Desktop	Documents	Downlo	oads
📰 Pictures 🛛 🖈		(*E)		
b Music	Music	Pictures	Videos	
🚼 Videos	, mase			
📙 Windows Defena 🗸 🗸	Devices and drives (3)			
ConeDrive	Windows (C:)	Local Disk (D:)		ND: (C)
This PC	70.5 GB free of 100 GB	351 GB free of 351 GB	DVD DVD RV	V Drive (E:)
Desktop				
Documents				
Downloads				
b Music				
E Pictures				
Folder: C	:\VCaptureSW			
			Exclude this	folder Cancel

## 7.3 Connecting the Cables to PC

IMPORTANT	Ensure to prepare a PCle Ethernet Card (1 Gps ≤) before connecting the Giga ethernet cable to the PC.				
IMPORTANT	Ensure to connect the Giga ethernet cable to PCIe Ethernet Card only. If you connect the cable to a place other than the designated card, it shall cause a system problem.				
NOTICE	<ul> <li>Always check the cable condition visually. The bad cable or bad connection environment may lead to unprecedented errors.</li> </ul>				
	<ul> <li>Connect the regular cables for the PC: keyboard, mouse, and video in advance.</li> </ul>				


Parts and	Giga Ethernet Cable	1 pc (Part No. 21)	$\mathbf{Q}$
Accessory	License Key	1 pc (Part No. 1)	Care of the second

1. Insert the 3D viewer License Key into a USB port.

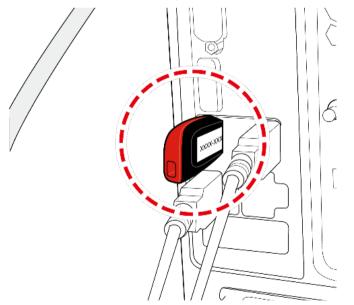

\_\_\_\_\_

2. Check if the License Key, Video Output, and Giga Ethernet Cable are connected, as shown in the image below.

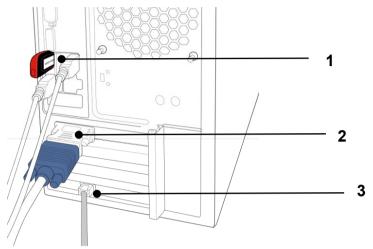

No.	Item
1	3D viewer License Key
2	Video output
3	Giga Ethernet Cable (Inserted into PCle Ethernet Card)




The illustrations may differ from the actual product.


## 7.4 Setting up the G-Ethernet Grabber
 
#### Entering the IP address


1. Enter "network" in the search box.



2. Click "View network connections"

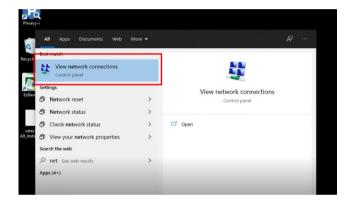

 Rename the network (e.g., vatech A9). And right-click the ethernet driver and select "properties."

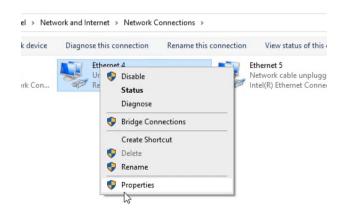

- 4. Select Internet Protocol Version 4. Then click "Properties."
- 5. **[Important]** Select "Use the Following IP Address." Then enter the given IP Address and Subnet Mask. (see the note below).

	<ul> <li>IP Address</li> <li>Subnet Ma</li> </ul>	sk: 255.255.255.0
	e	Diagnose this connection Rename th
A Netw	vorking Sharing	d network
Cor		e GbE Family Controll
	Internet Protocol Version 4 (TCP/IPv	4) Properties X
	General	
Th S S S	You can get IP settings assigned aut this capability. Otherwise, you need for the appropriate IP settings. Obtain an IP address automatic	to ask your network administrator
	Use the following IP address:     IP address:	10
	Subnet mask: Default gateway:	<u>255</u> .0.0.3
	Default gateway:	matically
	Default gateway:	matically
	Default gateway: Obtain DNS server address aut OUse the following DNS server a	omatically Idresses:

6. Click "OK" for the next step.

#### Setting up the device

1. Return to the search box and enter the **device manager**.

Best match  Control panel		2
Settings		
Device security	>	Device Manager Control panel
Device performance & health	>	
Device specifications	>	🖬 Open
Q Device ready after restart	>	
Bluetooth and other devices settings	>	
Printers & scanners	>	
A Find My Device	>	
Search the web		
O devic - See web results	>	
Documents (2+)		


2. Select the **Network adapter** and rightclick the ethernet driver, and click the **Properties**.

	E Device Manager
PC.	File Action View Help
	◆ ⇒   ः   📴   🔛 📰   🖳 💺 🗙 📀
	> 🐻 Biometric devices
/	> 🛄 Computer
roker	> 👝 Disk drives
	> 🕎 Display adapters
	> @ DVD/CD-ROM drives
	> 🖬 Firmware
	> 🐙 Flectron
	> 🙀 Human Interface Devices
ork	> 📄 Imaging devices
	> 🛄 Keyboards
	> () Mice and other pointing devices
13	> Monitors
Q y-i	> 📓 Multifunction adapters
~	V 💭 Network adapters
y-i	Intel(R) Ethernet Connection (2) I219-LM
	Intel/P) 1210 Ginshit Network Connection
	Realtek PCIe GbE Family Controller #3
	WAN Miniport (KEv2)
1	📮 WAN Miniport (IP)
Bin	WAN Miniport (IPv6)
Din	

3. Select the "Advanced" tab.

Itek PCIe GbE F	altek PCIe GbE Family Controller #3 Properties				
Events	Resources	Power M	lanagement		
General	Advanced	Driver	Details		

4. On the tab, scroll down until you find the "**Speed & Duplex**," then click it.

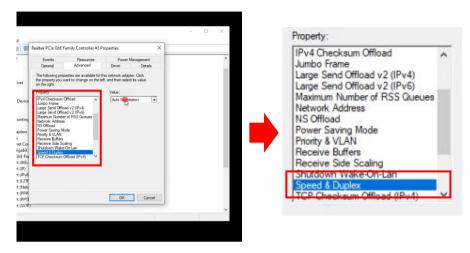

5. Click the arrow icon on the Value and select "1.0 Gpbs Full Duplex."

Biometric devices     Gomputer     Disk drives	Eventa Resources General Advanced	Power Management Driver Details	^	Auto Negotiation
> ■ Diply statem           > ■ Diply CASH           > ■ Diply CASH           > ■ Diply CASH           > ■ Diply CASH           > ■ Diply Statem           > ■ Primars           > ■ Monantinterface Diply           > ■ Monantinterface Diply           > ■ Monantinterface Diply           > ■ Monantinterface           ■ Notes           ■ Notes <th>Lang Sing Official + 2 (Pre) Lang Sing Official + 2 (Pre) Hancen Ruther (FSS Gausses) HS Official HS Official HS Official Power Sing Nobe Power Sing Nobe Receive Sing Scale Statem Wate-Crain Power Sing Scale Statem Wate-Crain</th> <th>The order of Addre Colle (Collection and etc. a value) Value Addre Topoland et al. The Collection of Address 100 May 160 Collection 100 May 160</th> <th></th> <th>1.0 Gbps Full Drolex 10 Mbps Full Duplex 10 Mbps Half Duplex 100 Mbps Full Duplex 100 Mbps Half Duplex Auto Negotiation</th>	Lang Sing Official + 2 (Pre) Lang Sing Official + 2 (Pre) Hancen Ruther (FSS Gausses) HS Official HS Official HS Official Power Sing Nobe Power Sing Nobe Receive Sing Scale Statem Wate-Crain Power Sing Scale Statem Wate-Crain	The order of Addre Colle (Collection and etc. a value) Value Addre Topoland et al. The Collection of Address 100 May 160 Collection 100 May 160		1.0 Gbps Full Drolex 10 Mbps Full Duplex 10 Mbps Half Duplex 100 Mbps Full Duplex 100 Mbps Half Duplex Auto Negotiation
WAN Miniport (PP)	i	OK Cancel		


6. [Important] Before clicking "OK," ensure that the pop-up looks as the below

Events	Resource	s	Power M	lanagement
General	Advanced		Driver	Details
	perties are availab vant to change on			
Property:			Value:	
Jumbo Frame Large Send Offlo Maximum Numbe Network Address NS Offload Power Saving M Priority & VLAN Receive Buffers Receive Side Sc Shutdown Wake Speed & Duplex TCP Checksum (	vad v2 (IPv6) er of RSS Queues s ode caling e-On-Lan		1.0 Gbps Fu	

## 7. Setting up PC
 
# Page Intentionally Left Blank

## 8. Setting up PC's Environment Variables



## 8.1 Before Beginning

IMPORTANT	<ul> <li>Ensure that the Emergency Stop Switch is in the OFF position before starting with the InstallShield installation.</li> <li>DO NOT install the programs irrelevant to image acquisition and view on the same PC. There may be subtle conflicts between them, leading to the malfunction.</li> </ul>
	<ul> <li>The PC system supplied with the equipment is intended to be used for image acquisition only. For the PC server for image management, it is strongly recommended to use a different PC.</li> </ul>
	<ul> <li>The programs related to the acquisition, viewing, and control of images should be installed on the formatted PC, where no other program(s) except the operating system (OS) is present.</li> </ul>
	<ul> <li>Before InstallShield installation, ensure that the video card driver installed on the PC is the most up-to-date version. To check this, go to the website of the graphics card manufacturer.</li> </ul>

#### **Checking PC BIOS Settings**

The PC is shipped, with its BIOS settings, as specified in **Appendix D. Checking PC BIOS Settings**. Before proceeding to the next sections, check the BIOS status. In case the BIOS settings have not been configured in advance or the settings are different, perform the following steps.

- 1. Reboot the PC and go to BIOS setting mode.
- 2. Set the variables as shown in the following table.

PC BIOS default					
Main Menu	Sub1 Menu	Sub2 Menu	Setup Value		
Advanced	Power Options	Runtime Power Management	[Disable]		
Advanced	Power Options	Idle Power Savings	[Normal]		
Advanced	Power Options	Enhanced Halt State (C1E)	[Disable]		


 When you update the BIOS settings, the "EnhancedHalt State (C1E)" option will be displayed.

#### 8. Setting up PC's Environment Variables


## 8.2 Turning off the Firewall

The LAN port and local IP may be blocked by the Windows Firewall property, leading to interruptions in imaging acquisition and data transmission. For this reason, it is required to disable the Windows Firewall by using the following procedures.

- 1. Open the Start screen, and type **Windows Firewall** in the search box.
- 2. Click the **Windows Firewall** icon to start the Windows Firewall on the search result.
- 3. On the Windows Firewall screen, click the Turn Windows Firewall on or off.

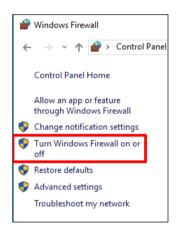

4. Select the **Turn off Windows Firewall** for both **Home or work (private)** and **Public** network location settings.

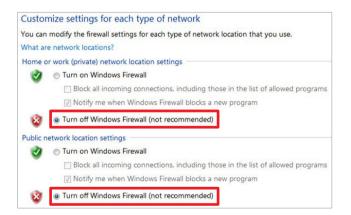

5. Click **OK** to apply the settings.

### 8.3 Setting up the Power Management Options

To avoid disruptive and abnormal operations while acquiring an image, you must reconfigure some Windows operating system parameters.

#### **Disable the Screen Saver**


- 1. Open the Start screen, and type **Change screen saver** in the search box.
- 2. Click the **Change screen saver** icon to start the **Screen Saver Settings** on the search result.
- 3. On-Screen, on the Saver Settings screen, select (None) in the pull-down menu.

Screen Saver Settings	×			
Screen Saver				
Screen saver       (None)       Yetings       Preview       Wait:       1       minutes       On resume, display logon screen	ĺ			
Power management Conserve energy or maximize performance by adjusting display brightness and other power settings. <u>Change power settings</u>				
OK Cancel App	bly			


4. Click **OK** to apply the settings.

#### Selecting the Power Options: Monitor and System

- 1. Open the Start screen, and type **Power Options** in the search box.
- 2. Click the Power Options icon to start the Power Options on the search result.
- 3. Click Choose when to turn off the display.

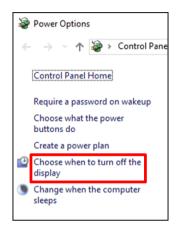


4. Select Never for both Turn off the display and Put the computer to sleep fields.

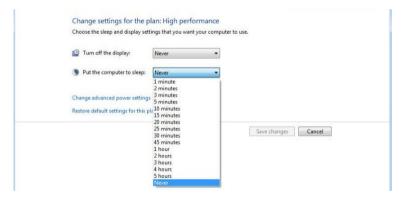

5. Click **Save changes** to apply the settings.

## 8.4 Turning off the User Account Control

- 1. Open the Start screen, and type **User Account Control** or **UAC** in the search box.
- 2. Click Change User Account Control Settings in the search results.

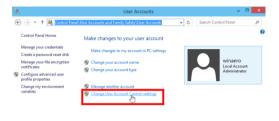



3. Disable the UAC by moving the slider bar down to '**Never notify.**' Then click **OK** to apply change settings.

User Account Contro	be notified about changes to your computer      Ihelps prevent potentially harmful programs from making changes to your computer.     Jeer Account Control settings
	Never notify me when:         • Apps try to install software or make changes to my computer         • I make changes to Windows settings
 Never notify	Not recommended.      OK Cancel
NOTICE	You may be asked to confirm your selection or enter an

4. Reboot your computer for the change to take effect.

\_\_\_\_\_

.\_\_\_

## 8.5 Setting Folder Exclusions with Anti-virus Software

	•	Set the virus scan exception for the files and folders related to this equipment.
	•	DO NOT run the memory-resident background programs unrelated to the equipment.
IMPORTANT	•	It is recommended to run the virus scan only when the equipment is idle.
	•	Turn the firewall off.
	•	Always use a blank USB drive if possible.
	a	

 
Some files used by the **vatech A9** are incorrectly recognized as viruses/trojans by anti-virus software. If you are using anti-virus software on your PC, you must exclude those files from all scans performed by the anti-virus software.

For **vatech A9**, the following folders and files inside for relevant software should be excluded from the virus scan.

Path		Software
C:\Program Files\Vatech		Ez3D-i/EzDent-i
C:\VCaptureS	SW	Console Software
NOTICE	in th ■ The	pose the anti-virus program from McAfee is running e background. procedure to set folder exclusions is similar to most virus programs.

- 1. Open the McAfee anti-virus program and select VirusScan.
- 2. Right-click the On-Access Scan menu option and left-click the Properties tab.
- Select the All Processes à Detection à Exclusions menu option and choose the Add menu button.
- 4. Navigate to the folders or the files you want to designate an exclusion path for, and select the checkbox to Exclude Subfolders.
- 5. Click **OK** when completed and exit McAfee for the path exclusion to be completed.


## 9. Installing Software




## 9.1 Before Beginning

	•	Ensure that the Emergency Stop Switch is off before starting with the InstallShield installation. DO NOT install the programs irrelevant to image acquisition and view on the same PC. There may be conflicts between them, leading to system malfunction.
IMPORTANT	•	The image viewer program such as <b>EzDent-i</b> or the one from the 3rd party should be installed in advance before the InstallShield installation.
	•	Before InstallShield installation, ensure that the video card driver installed on the PC is the most up-to-date version. To check this, go to the website: www.nvidia.com.
	•	Perform a virus scan for the PC and InstallShield program before proceeding with its installation.

## 9.2 Software Installation Flow

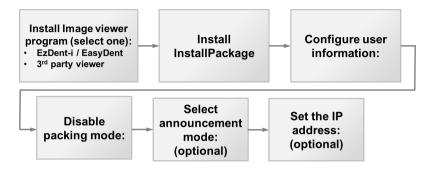

## 9.3 Installing the Image Viewer Program

 

.....

---


## 9.4 Installing the InstallShield

	USB drive	IIShield installation information is included i e provided as an accessory. neck the serial number.txt (e.g., 047-011752	
	🔳 047-011752 - 메모장	>	<
	파일(F) 편집(E) 서식(O) 5	17(V) 도름얇(H)	
	Ez3D Plus Sta	None	<u></u>
NOTICE	Ez3D Plus Prof	None	
NOTICE	Ez3D Plus Pre	None	
NOTICE	E230 i	None	
	Model	PaX-i	
	Modality	PANO	
	CT Sensor Type	None	
	Pano Sensor Type	AnyPano-X(HQ)	
	Ceph Sensor Type	None	
	Frame Grabber Type	Ethernet	
	Additional Options 1	None	
	Additional Options 2	DirectX	
	c	3	4

- 1. Ensure that both the PC and the equipment are turned on.
- 2. Insert the USB drive into the USB connector and <u>perform a virus scan for the</u> <u>PC before installing the InstallShield.</u>
- 3. Go to the InstallShield folder and run **Setup.exe**.



4. When the pop-up for setup appears, click **Next**.

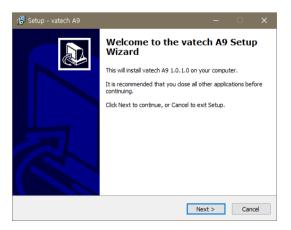

5. Confirm that all modalities are checked as below. If the CEPH feature is not included in your equipment, uncheck the CEPH option. Then click **Next**.

j🛃 Setup - vatech A9		—		×
Select Modality Please select modality of previous selection:			C	
✓ CBCT ✓ PANO ✓ CEPH				
	< Back	Next >	Car	ncel


6. Confirm that the "WidePano" is selected for the CBCT sensor and click Next.

j🛃 Setup - vatech A9		-	-	
Select CT sensor type Please select CT sensor type				
WidePano				
	< Back	Next >		Cancel

7. Confirm that the "WidePano" is selected in the PANO sensor and click Next.

i Setup - vatech A9			
Select PANO Sensor Please select panorama sensor type			
WidePane			
< Ba	ick Next >	Ca	ncel


8. (Optional) Select "WideCeph G" for the CEPH sensor type and click Next.

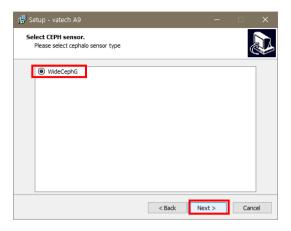

9. Select the language for the equipment and click **Next**.


1₽ Setup - vatech A9			×
Select localized language Please select correct language to be used		1 1 1 1	B
English     English (USA)     French     German     Italian     Korean     Portuguese     Japanese     Chinese (Simplified)     Chinese (Traditional)     Chinese (Traditional)     Chinese (Traditional)     Chinese (Traditional)     Chinese (Traditional)     Chinese (Traditional)			
< Back	Next >	Cancel	

10. Select the connection for CR modality (Pano, Ceph) and click Next to continue.

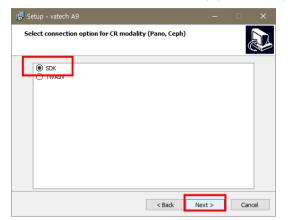




11. Select the connection option for CBCT modality and click **Next** to continue.

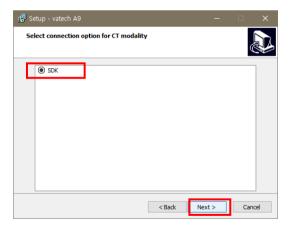

12. Confirm that your **User Option** and **Installation Option** are selected as per the image below. For the first-time installation, check all installation options provided.

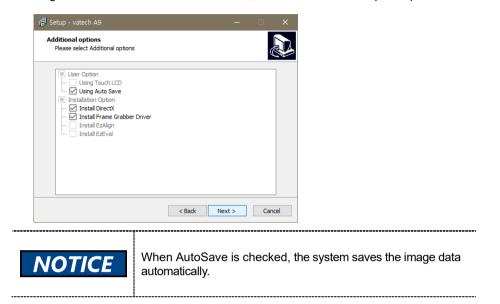

13. Check F.Grabber-ET on the window and click NEXT.



14. On the **Ready to Install** window, confirm that the information you have entered is correct. If you need to make a change, click **Back** to return to the previous window.

🚽 Setup - vatech A9	-		×
Ready to Install Setup is now ready to begin installing vatech A9 on your computer.		6	
Click Install to continue with the installation, or click Back if you want change any settings.	to revie	w or	
Install log Install Path = C:₩VCaptureSW₩ Machine = vatech A9 Model = PHT-30CSS Sensors = CBCT(WidePano) PANO(WidePano) CEPH(WideCephG) Language = English (USA) Connection CR = SDK Connection CR = SDK Frame Grabber Type = F.Grabber -ET Vcredist_x86 (2008) is already installed Vcredist_x86 (2013) is already installed < <		>	
< Back Inst	all	Can	cel

15. Click Install to complete the installation when all information is confirmed.

🔀 Setup - vatech A9	– 🗆 🗙
Installing Please wait while Setup in:	stalls vatech A9 on your computer.
Extracting files C:\VCaptureSW\VResou	rce₩ImageCbct₩Guide_ToothT25_norm.png
	Cancel
📳 Setup - vatech A9	- 🗆 X
	Completing the vatech A9 Setup Wizard Setup has finished installing vatech A9 on your computer. The application may be launched by selecting the installed shortcuts. Click Finish to exit Setup.
	Finish

#### Installing the DirectX

1. After completing the DICOM viewer installation, the DirectX® installation will be started. Select "**I accept the agreement**" in the Welcome window.



2. Click Next to start the installation.

 
DirectX Setup		-
Install DirectX runtime components		20
DirectX Runtime Install:		
This install package will search for and update as necessary. It may ta	updated DirectX Runtime Components ke a few minutes.	
To start installation, please click Ne	ext.	
	< <u>B</u> ack <u>N</u> ext >	Cancel
Installing Components		
Searching for updated DirectX Ru	ntime Components and updating as inutes	
necessary. This may take a few mi		
necessary. This may take a few mi		

3. Click Finish to exit the wizard.


Installing Microsoft(R) DirectX	(R)
	Installation Complete
DirectX <sup>®</sup>	
	The components installed are now ready for use.
	< <u>B</u> ack <b>Finish</b> Cancel

#### Installing fs2000 Manager

1. Select the fs2000 manager installer from the program list.



2. Click Next to proceed with the installation.

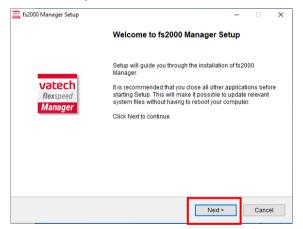

3. Select the Destination Folder and click **Install**.



4. Click Finish to finalize the program installation.

📰 fs2000 Manager Setup		- 🗆 X
	Completing fs2000 Mai	nager Setup
vatech flexspeed	fs2000 Manager has been insta Click Finish to close Setup.	illed on your computer.
Manager	🗹 Launch App	
	<b>r</b>	
	< Back	Finish Cancel

## 9.5 Setting up the User-specific Information

NOTICE	<ul> <li>See the corresponding section for setup instructions based on the viewer program (EzDent-i (SDK)) installed on the PC.</li> <li>EzDent- i: Refer to Section 9.5.2 when the EzDent-i is installed.</li> </ul>				
NOTICE	This program must be run in administrator mode.          Open         Open file location         Image: Second strate in the				

### 9.5.1 Running the Image Viewer


1. Run the image viewer. On your desktop, double-click the **EzDent-i** icon. The **EzDent-i**'s main window is displayed as follows.



€z Dent-i		QUISITION / VIEW		REPORT	/			Please select a patient.
SEARCH	Chart No.	Chart No. Name Gender/Age Date of Birth Name	More Details Dete of Birth	© Date	All	*	Modely	

### 9.5.2 Interfacing the EzDent-i with Imaging Program (One-time Linking)

1. On the main screen of the **EzDent-i**, click **EzDent-i**  $\rightarrow$  **Setting**.

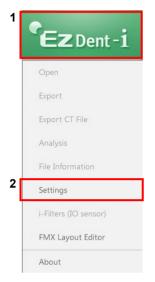

2. Click Acquisition  $\rightarrow$  Console Program.

	General 2 Console Program Dir	ectory
Environment	CONSOLE PROGRAM	
	Console Program Path	Capture Message
Acquisition	C://CaptureSW/exe//CaptureSW.exe	Captured
	INI FILE PATH	
Viewer	Patient Information File Path	Output File Path
	C:/VCaptureSW/PatientInfo.ini	C:/VCaptureSW/Output.ini
Simulation	SMARTPAY	
	SmartPay UI	Payment web page URL
	O Use O None	
Consult	_	Test
Report	SMARTPAY USER ACCOUNT	
-	ID	Password
		Test
Initialize Set		OK Cancel


- 3. Make sure that the console program settings are as follows:
  - Console Program Path: C:/VCaptureSW/exe/VCaptureSW.exe
  - Capture Message: vatech A9 Captured
  - Patient Information File Path: C:/VCaptureSW/PatientInfo.ini

SETTINGS		
	General Console Program	Directory
Environment	CONSOLE PROGRAM	
	Console Program Path	Capture Message
Acquisition	C:/VCaptureSW/exe/VCaptureSW.exe	Green Smart Captured
	INI FILE PATH	
Viewer	Patient Information File Path	Output File Path
	C:/VCaptureSW/PatientInfo.ini	C://CaptureSW/Output.ini
Simulation	SMARTPAY	
	SmartPay UI	Payment web page URL
Consult	Use     None	
Consult	-	Test
Report	SMARTPAY USER ACCOUNT	
	ID	Password
		Test
Initialize Sett	tings	OK Cancel

4. Click **OK** and restart the program to apply the settings.



#### 9.5.3 Creating a New Patient Record

 

1. Click on the Add Patient button from the PATIENT tab.



2. Enter the required patient information. **Chart Number**, **First Name**, and **Last Name** are required fields that must be filled in. All other fields are optional, but it is recommended that they be filled in.

ADD PATIENT			<b>X</b>
		Chart No.*	20170131_171408
		Name*	Last Name First Name
PHO	TO	Gender	Male
		Date of Birth	Month Day Year
Doctor 1		None	Doctor 2 None
Social ID	[		
Phone			
Mobile	[		
E-Mail	[		
Zip Code	[		
Address	[		
		Add	Cancel


3. Click Add to save the patient record.

### 9.5.4 Initiating the Imaging Program

 1. Click the **ACQUISITION** tab. The imaging mode selection buttons appear.


	VIEWER CONSULT	REPORT
ppear differently, dep		
	he imaging mode se	he imaging mode selection buttons in the ppear differently, depending on the equipr

2. Select the imaging mode. Then, the main GUI in the selected imaging mode appears.



3. Proceed to section 9.5.5, Configuring the Parameters.

#### 9.5.5 Configuring the Parameters

 

1. From the main GUI window, click the settings icon(



2. Log in tap will be open by default. On the right side of the screen, select **Engineer** and type the password ('vatech') and then click Log In.



3. Click on the **User** tab.

Log in User General Sensor/Default FOV Info (CBCT)
--

4. The User Settings are displayed as shown in the following figure.

og in User	General Sensor/Default FOV Info (CBCT)		
User Setting	J		User
Language o	ption	Captured count	Engineer
Language	English		Reset
Door lock op	tion	PANO	Reset O Log C
Door lock	Unlock ~ Machine set	СЕРН ВВВВВВ	Reset
DAP option		Keep up option	
Show DA	value	Use keep up projection file	
DAP level	Normal ~	CT 10 Count	(Def : 5)
DAP unit	mGy.cm^2 ~	CR 10 Count	(Def : 5)
lmage label	option	DB save option	
Use Label		Auto saving	
Label text	vatech A9	CBCT All mode	
Operator		PANO Standard	
Text size	40 (Range : 20 ~ 100)		
Use Pano	ruler		
Use Ceph	ruler	CEPH 🗌 All mode	
Privacy polic			
Personal in	nformation is displayed with *.		
			B Sav

5. In the **Image Label Option**, check that the **Label Text** and Text Size are displayed the same as below.

lmage Label	Option					
Use Label						
Label Text	vatech A9					
Operator						
Text Size	40	( Range : 20 ~ 100 )				
Use Pano Ruler						
Use Ceph F	Ruler					

6. In the **DAP**, check that the DAP Level and DAP Unit are displayed in the following figure.

D	DAP					
	Show DAP \	/alue				
	DAP Level	Normal 👻				
	DAP Unit	mGy x cm^2  ▼				

7. In the **Language Option**, the default language setting is English. If necessary, change the language setting from the drop-down list and click **Machine Set**.

Language Option				
Language	English	1 🚽	2	Machine Set

8. Click on the **General** Tab and type the equipment's serial number in the **Machine information**.

Control Panel	
Log in User Ge	neral Sensor/Default FOV Info (CBCT)
General Setting	
Machine informa	tion
Manufacturer	Vatech Company Limited
Machine name	vatech A9 $\lor$
Model name	PHT-30CSS 2
Serial number	047001234
Networking optio	n
Serial	COM 2 V 19200 Manager
Ethernet	127 . 0 . 0 . 1 31190

9. In the **Patient Information Setting**, configure the Link Type, File Path, and File Name, as shown in the following figure.

Patient information setting				
CT Link Type	PatientInfo File 🗸 🗸			
File Path	C:₩VCaptureSW₩			
File Name	PatientInfo.ini			
CR Link Type	PatientInfo File 🗸 🗸			
File Path	C:₩VCaptureSW₩			
File Name	PatientInfo.ini			

10. In the **Link Information Setting**, configure the Link Type and File Extension as below.

Fields		Whe	n EzDent-i	is used	
CT / CR Link Type SD		SDK Lin	ĸ		
CR Save N	lame		.DCM		_
Link information	setting —				
CT Link Type	SDK Link		~		
CT Save Path	C:₩VCaptu	reSW₩Im	ageOutput₩CT		
CR Link Type	SDK Link		~		
CR Save Path	C:₩VCaptu	C:\VCaptureSW\ImageOutput\CR			
CR Save Name	Image .DCM ~				
Capture Message	vatech A9	Captured			
Output File Path	C:₩VCaptureSW₩				
Output File Name	Output.ini				
					Save


11. Click on the Sensor / Default tab and configure the user-defined parameters.



.....

The default features can be modified according to the user's requirements.

\_\_\_\_\_

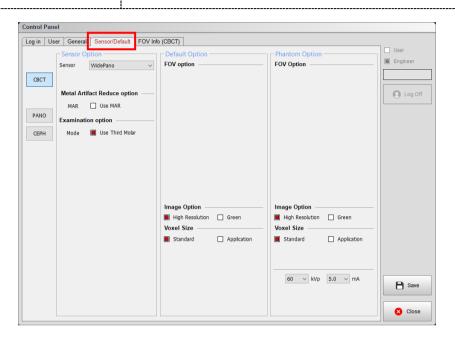

12. Click Save if changes occurred.



#### **Disabling the Packing Mode**

IMPORTANT	<b>vatech A9</b> has the Packing Mode built into the system to prevent the unit from being damaged while shipping and transporting. Since the mode is automatically turned on upon shipping, the installer must disable the Packing Mode before turning on the equipment.
<b>CAUTION</b>	The equipment does not operate even after the power is turned on if the packing mode is not properly disabled.


- 1. Click on the General Tab on the Control Panel.
- 2. The Networking option enables the Ethernet checkbox and sets **Ethernet IP** and **Port** as below, and then clicks **Manager**.

Networking option				
Serial	COM 2	$\sim$	19200	Manager
Ethernet	127 . 0	. 0	. 1 31190	Manager

3. Enter the command **PVER**] to verify the current mode. Note that the equipment is now in packing mode.



4. Enter the command **PKEN\_0000**] to exit the packing mode. Now note that the equipment is out of packing mode.

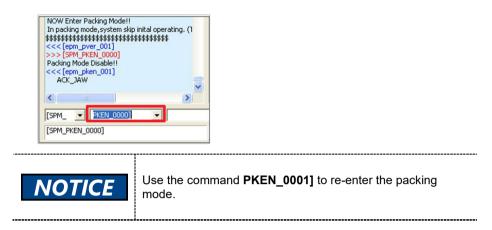

- 5. Click Exit and terminate the Control Panel.
- 6. [Important] Exit the imaging program (main GUI).
- 7. Reboot the system for the changes to take effect.

#### Selecting an Announcement Mode: Music or Beep (Optional)

**If selecting an announcement between music and beep is necessary**, perform the following procedures.

#### Command specifications:

	Command format: [SPM_MPOP_XXXX]				
хххх	Imaging Modes	Announcement Mode	Division		
0000	CT/PANO	Music	Different for each mode		
0001	CT/PANO	Music	Same for each mode		
0002 (Default)	CT/PANO	Веер	Same for each mode		

 Send the command by the command specification, as specified in the table above. Here are some examples.

Default mode: 0002(beep) for each imaging mode.


## < When the same Music Announcement is desired for CT and PANO imaging modality >

Enter the command [SPM\_MPOP\_0001] in the command field.



## < When the same Beep Announcement is desired for CT and PANO imaging modality >

Enter the command [SPM\_MPOP\_0002] in the command field.

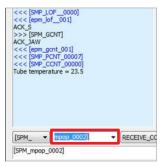

#### **Finalizing the Parameter Settings**

- 1. Click **Exit**  $\rightarrow$  **Close** and terminate the Control Panel.
- 2. [Important] Exit the imaging program (main GUI).

9. Installing Software

# Page Intentionally Left Blank


## 10. Technical Specifications

## 10.1 Mechanical Specifications


#### Dimensions (unit = mm)

ltem		Description	
	Without	108.3 kg (238.76 lbs without Base)	
Weight	CEPH unit	160.5 kg (353.84 lbs. – with Base)	
Weight	With	134.3 kg (296.08 lbs without Base)	
	CEPH unit	186.5 kg (411.16 lbs with Base)	
Total Height	Without Base	Max. 1948 mm (76.7")	
Total Height	With Base	Max. 1966 mm (77.4")	
	Without CEPH unit	Without Base: 882.8 (L) x 1314.5 (W) x 1948.0 (H) (mm) 34.8 (L) x 51.8 (W) x 76.7 (H) (")	
Dimensions during operation		With Base: 983.3 (L) x 1314.5 (W) x 1966.0 (H) (mm) 38.8 (L) x 51.8 (W) x 77.4 (H) (")	
(Length x Width x Height)	With CEPH unit	Without Base: 1898.4 (L) x 1314.5 (W) x 1648.0 (H) (mm) 76.4 (L) x 51.8 (W) x 76.7 (H) (")	
		With Base: 1938.9 (L) x 1314.5 (W) x 1966.0 (H) (mm) 76.4 (L) x 51.8 (W) x 77.4 (H) (")	
Installation Type		Base Stand / Wall Mount (Default: Wall Mount type)	
Packing Box Organization		Main Box, CEPH Box (Optional), Base Box (Optional)	

## 10.2 Drawing Dimensions

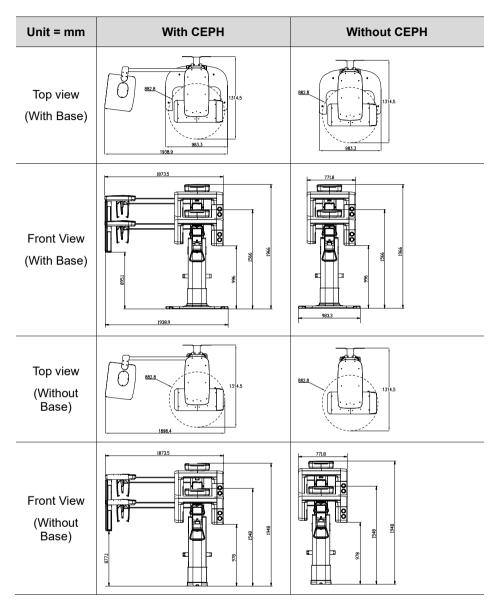

### 10. Technical Specifications

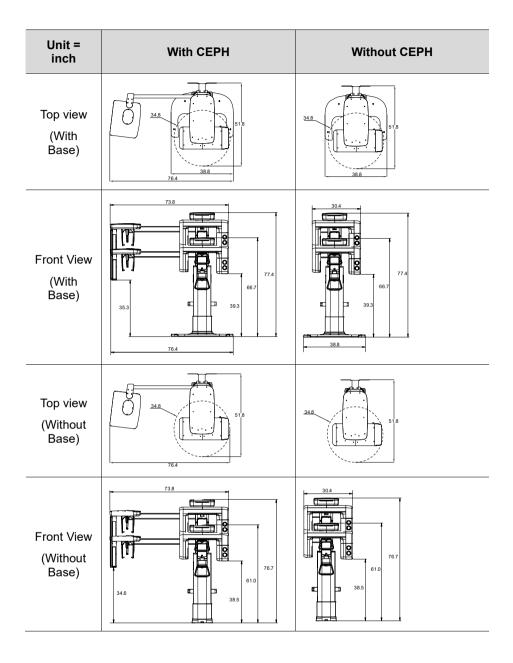


N

L Circuit breaker with power switch 20A EUT

#### **Electrical Specifications** 10.3

Item	Description	
Power supply voltage	100 - 240 V ~	
Frequency	50 / 60 Hz	
Power rating	1.7 kVA	
Accuracy	Tube Voltage (kVp) ± 10 % Tube Current (mA) ± 20 % Exposure Time (s) ± (5 % + 50 ms)	

- The input line voltage depends on the local electrical distribution system. .
- Allowable input voltage fluctuation requirement: ±10 %.
- Mode of operation: non-continuous operation (NFPA:70 long time operations) -. needs waiting time (at least 60 times the exposure time) before the next exposure begins.

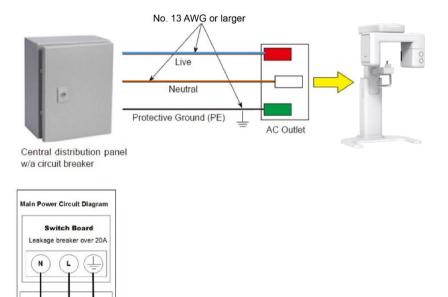

	<ul> <li>To assure line voltage quality, a separate 3-core grounded power cable connected directly to the central distribution panel with an over-current circuit breaker rated for 20A must be used.</li> <li>Maximally allowed deviation of the tube voltage/tube</li> </ul>
NOTICE	current/exposure time: Tube Voltage (kVp) ± 10 % / Tube Current (mA) ± 20 % / Exposure Time (s) ± (5 % + 50 ms) according to IEC 60601-2-63.
	<ul> <li>The mains resistance should not exceed 0.045 ohm at 100 V and 0.19 ohm at 240 V.</li> </ul>
	<ul> <li>This equipment should be connected to the earthed outlet.</li> </ul>

## 10.4 Environmental Specifications

It	Description	
During Operation	Temperature	10~35 ℃
	Relative humidity	30 ~ 75 %
	Atmospheric pressure	860 ~ 1060 hPa
Transport and Storage	Temperature	-10 ~ 60  ℃
	Relative humidity	10 ~ 75 %
	Atmospheric pressure	860 ~ 1060 hPa

# Page Intentionally Left Blank

# Appendix

# A. Installing the Warning Lamp and Door Interlock Switch


# <u>Requirement</u>

- 1. The warning control system shall be connected to the ERB (earth reference bar) of the room that it is associated with.
- The switching arrangements, location, height, and several illuminated warning signs shall be agreed upon with the local radiation protection advisor (RPA). (Customer)
- 3. A fluorescent lamp shall not be used in the 'X-rays on' sign.
- 4. The customer shall be responsible for the proper installation of the warning control system, including the lamp and door interlock switch, based on the MEIGaN guideline.


MEIGaN: Medical Electrical Installation Guidance Notes

- 5. Pre-installation planning is crucial to the successful installation of these devices.
- 6. For further details, refer to the accompanying volume: Specification for Electrical Installation


# Block Diagram

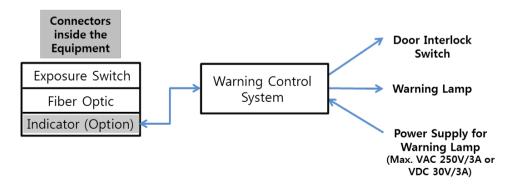

#### Schematic Diagram

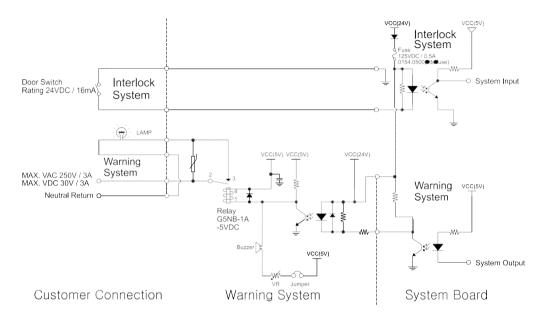

#### **Components Supplied**

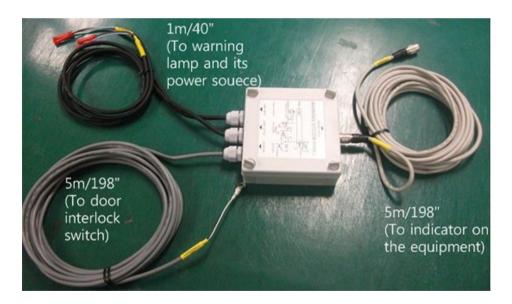

#### **Procedures**

<The individual cable length>


- Signal Cable: 5 m / 198"
- Door interlock cable: 5 m / 198"
- Warning lamp: 1 m / 40"
- Power source cable: 1 m / 40"



- 1. Prepare the Warning System Panel (Part No. 28)
- 2. Install the Warning System Panel at the proper height after taking each cable length into account.
- 3. Connect the warning lamp (not provided).
- 4. Connect the door interlock switch (not provided).
- 5. Connect the power source for the warning lamp.

# B. Installing the Emergency Stop Switch

- Install the Emergency Stop Switch on the power cable line.
- Install this switch so that it is easy to reach in an emergency but cannot be pushed by mistake.
- The switch shall be a type of mistake-proof.
- The switch is not supplied.
- The switch shall be installed at a height of 1.2 to 1.5 meters (47 to 60").

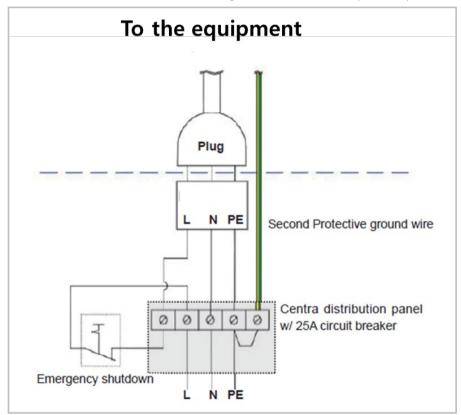


- 1. The cable sizes are N, L, and PE $\ge$  12 AWG (3 x 4 mm<sup>2</sup>).
- 2. The cable to **Emergency Stop Switch** shall be the same size as the power cable itself.
- 3. Install the socket connector terminal for the 2nd protective ground wire.

# C. Connecting the 3<sup>rd</sup> party Exposure Switch (Optional)

This section explains how to connect the third-party **Exposure Switch** with the equipment from **VATECH**.

#### < How to >

- 1. Cut the Exposure Switch cable provided with the equipment.
- 2. According to the following schematic diagram, rewire the cables.
- 3. Double-check the wiring before use.

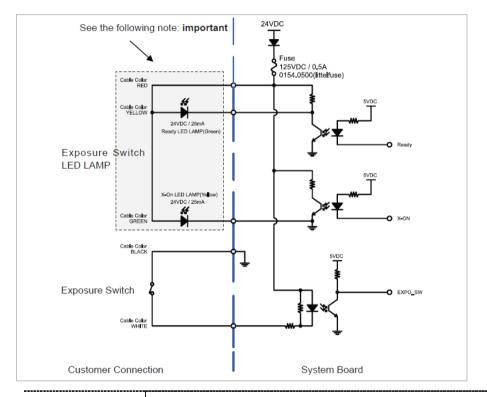



Tape the end of each unused wire to prevent the wires from causing an inadvertent short circuit

# D. Checking PC BIOS Settings

< HP PC BIOS Setup >

#### PC Model: HP Z1

PC BIOS default				
Main Menu	Setup Value			
Advanced	Power Options	Runtime Power Management	[Disable]	
Advanced	Power Options	Idle Power Savings	[Normal]	
Advanced	Power Options	Enhanced Halt State (C1E)	[Disable]	

# E. Installation Checklist

#### 1. General Information:

#### <u>Customer</u>

#### Information about the Equipment Purchaser

Name of Clinic or Hospital	
Address	
Phone	
E-Mail	
Website	

#### Dealer

#### Information about the Equipment Seller

Name of Dealer	
Address	
Phone	
E-Mail	
Website	

#### 2. Installation Information:

Address of Installation Site	
Names of Installers	
Scheduled Date of Installation	
Date of installation	
Model	
Serial No.	

#### 3. System Delivery to Site:

	Yes	Νο
Did you review and identify the delivery route and method for equipment in advance?		
Is the freight elevator available?		
Is the security guard, if any, notified of the installation in advance?		
Are two installers, including the helpers, available to move and unload the equipment?		

# 4. Before Installation:

Site Check List

	Yes	No
Is the room large enough? At minimum, Without CEPH unit : 2,500 mm (L) x 1,700 mm (W) x 2,700 mm (H) With the CEPH unit : 2,500 mm (L) x 2,500 mm (W) x 2,700 mm (H)		
Is the door entrance wider than 800 mm (32")?		
Is a radiation protection plan in place?		
Do equipment and PC use the same dedicated circuit?		
Does the electrical input condition to the installation site meet the MEIGaN requirements?		
Is the local network IP address of the clinic 192.168.33.xx?		
Is a compressor or air conditioner suction located right next to X-ray Room?		
Is the floor flat and level?		
Is the carpet on the floor? If so, remove it.		

#### Before Opening Boxes

vatech A9 (Model: PHT-30CSS) Installation Manual

	Yes	No
Did the delivery company carry and handle with caution?		
Did the installers take pictures of the boxes before opening them?		
Did the installer make sure there are not any suspicious holes or scratches on the box?		
Is the ShockWatch indicator red?		
Is the TiltWatch indicator red?		

#### After Opening Boxes

	Yes	No
Did the installers make sure there are not any scratches or broken surface equipment?		
Are all accessories and cases included in the box?		
Have you read the installation manual out in its entirety before starting the installation?		
Did the installer take pictures after opening the boxes?		
Did the installer make sure there were not any suspicious holes or scratches on the box after opening it?		

#### 5. While Installing Equipment

	Yes	No
Are installers careful with any sensitive parts while carrying equipment?		
Did the installers make sure that various cables, especially optic cables, are not coiled too much?		
Did the installers perform installations according to the manual?		
Did the installers touch or place pressure on the sensors while installing?		
Did the installer make sure the harness and equipment are well connected and not damaged?		
Did the installers check if the emergency button (switch) is working properly?		
Did the equipment be well balanced?		

English

Appendix

### 6. After Installation

	Yes	No
Does the chin rest successfully initialize after turning on the system?		
Are the cables organized well?		
Is it OK after visually checking the equipment?		
Is the normal voice message audible during system initialization after turning on the system?		
Does the LED on the front of the equipment turn green?		
Does the Up/Down switch work properly?		

# 7. Software Compatibility

	Yes	No
Is Anti-virus software installed?		
Is a firewall installed? If yes, indicate software or hardware.		
	Туре:	
Is the 3 <sup>rd</sup> party software installed? If yes, indicate the name(s) and versions.		
Are they compatible with software from <b>Vatech</b> ®? If No, indicate the name(s) and versions.	Version:	

#### 8. Electrical Requirements:

	Yes	No
Is the circuit breaker installed and evaluated in the distribution panel for over-current protection w/20A?		
Is internal line impedance checked? ( $Z_{input} \le 0.5 \Omega$ )		
Do equipment and PC use the same dedicated circuit?		

#### Appendix

# 9. Network Configuration:

	Yes	No
Is a network configured with 1 Gbit/s of CAT5?		
Is the equipment connected to the network?		
Is the network installation company identified?		
What is the TCP/IP address assigned?	Address:	-
What is the subnet masking address?	Address:	
Is there a DHCP server?		

# Copyright by © 2020 VATECH Co., Ltd.

All rights reserved.

The documentation, brand name, and logo used in this manual are copyrighted.

No part of this manual may be reproduced, transmitted, or transcribed without the manufacturer's written permission.

We reserve the right to make any alterations that may be required due to technical improvement. For the most current information, contact your **VATECH** representative.

Tel: (+82) 1588-9510 Email: gcs@vatech.com Website: www.vatech.com Headquarters: 13, Samsung 1-ro 2-gil, Hwaseong-si, Gyeonggi-do, 18449, Korea Factory: 13, Samsung 1-ro 2-gil, Hwaseong-si, Gyeonggi-do, 18449, Korea



The CE symbol grants this product compliance to the European Directive for Medical Devices 93/42/EEC as amended by 2007/47/EC as a class IIb device.

# vatech A9

ZIP Code : 18449 13, Samsung 1-ro 2-gil, Hwaseong-si, Gyeonggi-do, Republic of Korea www.vatech.com

